



Forwarding Configuration Guide

Version 20.11.1, 18 November 2020

| Registered Address | Support | Sales |
|---|--|--|
| 26, Kingston Terrace, Princeton, New Jersey 08540, United States | | |
| | | +91 80 4850 5445 |
| http://www.rtbrick.com | support@rtbrick.com | sales@rtbrick.com |

©Copyright 2020 RtBrick, Inc. All rights reserved. The information contained herein is subject to change without notice. The trademarks, logos and service marks ("Marks") displayed in this documentation are the property of RtBrick in the United States and other countries. Use of the Marks are subject to RtBrick's Term of Use Policy, available at <https://www.rtbrick.com/privacy>. Use of marks belonging to other parties is for informational purposes only.

Table of Contents

| | |
|--|----|
| 1. Introduction to Forwarding | 6 |
| 1.1. Guidelines and Restrictions | 6 |
| 2. Interface Commands | 7 |
| 2.1. Creating a Physical Interface | 7 |
| 2.2. Creating a Logical Interface | 7 |
| 2.3. Delete a Logical Interface | 7 |
| 2.4. Assign Logical Interface IPv4 Address | 8 |
| 2.5. Assign Logical Interface IPv6 Address | 8 |
| 2.6. Delete Logical Interface IPv4 Address | 9 |
| 2.7. Delete Logical Interface IPv6 Address | 9 |
| 2.8. Specifying Interface Description | 10 |
| 2.9. Setting the Admin Status of a Physical Interface | 10 |
| 2.10. Disable (Shut Down) a Logical Interface | 10 |
| 2.11. Enable a Logical Interface | 11 |
| 2.12. Disable IPv4 on a Logical Interface | 11 |
| 2.13. Disable IPv6 on a Logical Interface | 12 |
| 2.14. Disable MPLS on a Logical Interface | 12 |
| 2.15. Enable IPv4 on a Logical Interface | 12 |
| 2.16. Enable IPv6 on a Logical Interface | 13 |
| 2.17. Enable MPLS on a Logical Interface | 13 |
| 2.18. Disable Physical Interfaces | 13 |
| 2.19. Set IPv4, IPv6 or MPLS MTU Size | 14 |
| 2.20. Configure an MPLS label with an IPv4 Address | 15 |
| 2.21. Configure Interface Port Speed | 15 |
| 2.22. Ping an IPv4 Address that is Part of a VRF Instance | 16 |
| 2.23. Ping an IPv6 Address that is Part of a VRF Instance | 16 |
| 2.24. Extended Community Support for Static and Interface Routes | 17 |
| 2.24.1. Community setting for interface routes | 17 |
| 2.25. Configuring Port Mirroring | 17 |
| 2.25.1. Mirroring one physical interface traffic to another physical interface | 18 |
| 2.25.2. Mirroring one logical interface traffic to another physical interface | 19 |
| 2.25.3. Capturing Mirror Traffic | 19 |
| 2.25.4. Mirror Logical Interface Traffic to CPU | 20 |
| 2.25.5. Deleting Port Mirroring Configuration | 21 |
| 2.26. Host Path Capturing Tool | 21 |
| 2.26.1. Shared Memory Interface | 21 |
| 2.26.2. Logical Interface | 21 |
| 2.26.3. Physical Interface | 21 |

| | |
|--|----|
| 2.26.4. Filtering by Protocol | 22 |
| 2.26.5. Raw Option Capture tool | 22 |
| 2.26.6. PCAP file format | 22 |
| 2.27. IP Fragmentation | 23 |
| 2.27.1. Guidelines and Limitations of IP Fragmentation | 23 |
| 2.28. Firewall Filter Configuration | 23 |
| 2.28.1. IPv4 Match Configuration (global) | 24 |
| 2.28.2. IPv6 Match Configuration (global) | 24 |
| 2.28.3. IPv4/IPv6 Action Configuration (global) | 25 |
| 3. Static Routing | 26 |
| 3.1. Configure Static Route | 26 |
| 3.2. Community Configuration | 27 |
| 3.2.1. Extended Community configuration | 27 |
| 3.2.2. Configuring nexthop-profile | 27 |
| 3.3. Static Multicast Route Configuration | 29 |
| 3.3.1. Viewing the Static Multicast Route Configuration | 29 |
| 3.3.1.1. Delete Static route configuration | 29 |
| 3.3.2. Deleting nexthop-profile | 30 |
| 4. Show Commands | 31 |
| 4.1. Instance Commands | 31 |
| 4.1.1. show instance | 31 |
| 4.1.2. show instance <instance-name> | 31 |
| 4.1.3. show instance detail | 31 |
| 4.1.4. show instance <instance-name> detail | 32 |
| 4.2. Neighbor Commands | 32 |
| 4.2.1. show neighbor | 32 |
| 4.2.2. show neighbor <afi> | 33 |
| 4.2.3. show neighbor <afi> instance <instance-name> | 33 |
| 4.2.4. show neighbor instance <instance-name> | 33 |
| 4.3. Address Resolution Commands | 34 |
| 4.3.1. show address-resolution request | 34 |
| 4.3.2. show address-resolution response | 34 |
| 4.4. Route Show Commands | 35 |
| 4.4.1. show route | 35 |
| 4.4.2. show route detail | 36 |
| 4.4.3. show route prefix <prefix/label> | 36 |
| 4.4.4. show route prefix <prefix/label> detail | 37 |
| 4.4.5. show route source <source> | 37 |
| 4.4.6. show route source <source> detail | 38 |
| 4.4.7. show route source <source> prefix <prefix> | 38 |
| 4.4.8. show route source <source> prefix <prefix> detail | 38 |

| | |
|--|----|
| 4.4.9. show route source <source> instance <instance-name> | 39 |
| 4.4.10. show route source <source> instance <instance-name> detail | 39 |
| 4.4.11. show route source <source> instance <instance-name> prefix <prefix> | 40 |
| 4.4.12. show route source <source> instance <instance-name> prefix <prefix> detail | 40 |
| 4.4.13. show route instance <instance-name> | 41 |
| 4.4.14. show route instance <instance-name> detail | 41 |
| 4.4.15. show route instance <instance-name> prefix <prefix> | 42 |
| 4.4.16. show route instance <instance-name> prefix <prefix> detail | 42 |
| 4.4.17. show route <afi> | 43 |
| 4.4.18. show route <afi> detail | 43 |
| 4.4.19. show route <afi> prefix <prefix> | 44 |
| 4.4.20. show route <afi> prefix <prefix> detail | 44 |
| 4.4.21. show route <afi> source <source> | 45 |
| 4.4.22. show route <afi> source <source> detail | 45 |
| 4.4.23. show route <afi> source <source> prefix <prefix> | 46 |
| 4.4.24. show route <afi> source <source> prefix <prefix> detail | 46 |
| 4.4.25. show route <afi> source <source> instance <instance-name> | 47 |
| 4.4.26. show route <afi> source <source> instance <instance-name> detail | 47 |
| 4.4.27. show route <afi> source <source> instance <instance-name> prefix <prefix> | 48 |
| 4.4.28. show route <afi> source <source> instance <instance-name> prefix <prefix> detail | 48 |
| 4.4.29. show route <afi> <safi> | 49 |
| 4.4.30. show route <afi> <safi> detail | 49 |
| 4.4.31. show route <afi> <safi> prefix <prefix> | 50 |
| 4.4.32. show route <afi> <safi> source <source> | 50 |
| 4.4.33. show route <afi> <safi> source <source> detail | 51 |
| 4.4.34. show route <afi> <safi> source <source> prefix <prefix> | 51 |
| 4.4.35. show route <afi> <safi> source <source> prefix <prefix> detail | 51 |
| 4.4.36. show route <afi> <safi> source <source> instance <instance-name> | 52 |
| 4.4.37. show route <afi> <safi> source <source> instance <instance-name> detail | 52 |
| 4.4.38. show route <afi> <safi> source <source> instance <instance-name> prefix <prefix> | 52 |
| 4.4.39. show route <afi> <safi> source <source> instance <instance-name> prefix <prefix> detail | 53 |
| 5. Interface Show Commands | 54 |
| 5.1. show interface physical | 54 |
| 5.2. show interface <interface-name> | 56 |

| | |
|---|----|
| 5.3. show interface logical | 56 |
| 5.4. show interface logical instance default | 56 |
| 5.5. show interface address | 57 |
| 5.6. show interface address instance default | 57 |
| 5.7. show interface summary | 57 |
| 5.8. show interface <interface-name> | 59 |
| 5.9. show interface <interface-name> detail | 59 |
| 5.10. show interface <interface-name> statistics | 60 |
| 5.11. show interface <interface-name> statistics | 66 |
| 5.12. show interface detail | 68 |
| 5.13. show interface statistics | 70 |
| 6. Statistics Show Commands | 74 |
| 6.1. Viewing ACL Statistics | 74 |
| 6.1.1. show bcm acl statistics | 74 |
| 6.1.2. show bcm acl statistics type <type> | 75 |
| 6.1.3. show bcm acl statistics type l3v4 rule <rule-name> | 75 |
| 6.2. Viewing PPPOE statistics | 76 |
| 6.2.1. show bcm pppoe counters | 76 |
| 6.2.2. show bcm pppoe counters <subscriber-ID> | 77 |
| 7. Clear Commands | 78 |
| 7.1. Interface Counters | 78 |
| 7.1.1. clear interface statistics | 78 |
| 7.1.2. clear interface statistics <interface-name> | 78 |
| 7.2. Clearing ACL Counters | 78 |
| 7.2.1. clear acl counters | 78 |
| 7.2.2. clear acl counters type <type> | 78 |
| 7.2.3. clear acl counters type <type> rule <rule-name> | 78 |
| 7.3. BCM clear Counter | 78 |
| 7.3.1. Interface Counters | 79 |
| 7.3.1.1. clear bcm interface statistics | 79 |
| 7.3.1.2. clear bcm interface statistics <interface-name> | 79 |

1. Introduction to Forwarding

FWDD interface commands fall into four major areas:

- Physical interface commands
- Logical interface commands
- Routing table (IPv4, IPv6, VRF, MPLS) commands

1.1. Guidelines and Restrictions

- The interface number displayed by RBFS may be different from the port number that you see on the front plate of the switch's chassis. This is because the interface number in RBFS always starts with 1, whereas the port number of the switch's front panel may start with either 0 to 1.

2. Interface Commands

2.1. Creating a Physical Interface

The following command creates a physical interface.

```
set interface <physical interface>
```

| | |
|----------------------|--------------------------------|
| <physical interface> | Name of the physical interface |
|----------------------|--------------------------------|

Example

```
root@rtbrick: cfg> set interface ifp-0/0/1
root@rtbrick: cfg> commit
```

2.2. Creating a Logical Interface

The following command creates an interface on the default instance.

```
set interface <physical interface> unit <logical-unit-id> instance <instance>
```

| | |
|----------------------|--------------------------------|
| <physical interface> | Name of the physical interface |
| <logical-unit-id> | Logical unit ID |
| <instance> | Name of the instance |

Example

```
root@rtbrick: cfg> set interface ifp-0/0/1 unit 4071 instance ip2
root@rtbrick: cfg> commit
```

2.3. Delete a Logical Interface

Command to delete logical interface in instance (a show command will verify deletion)

```
delete interface <physical interface> unit <logical-unit-id>
```


| | |
|----------------------|--------------------------------|
| <physical interface> | Name of the physical interface |
| <logical-unit-id> | Logical unit ID |

Example

```
root@rtbrick: cfg> delete interface ifp-0/0/40 unit 4071
root@rtbrick: cfg> commit
```

2.4. Assign Logical Interface IPv4 Address

Command to assign an IPv4 address to a logical interface on the default instance and verify that the assignment is correct

```
set interface <physical interface> unit <logical-unit-id> address ipv4 <ipv4-address>
```

```
set interface <physical interface> unit <logical-unit-id> address ipv4 <ipv4-address> secondary <true|false>
```

| | |
|----------------------|--------------------------------|
| <physical interface> | Name of the physical interface |
| <logical-unit-id> | Logical Unit ID |
| <ipv4-address> | IPv4 address to assign |
| <true false> | True or False |

Example

```
root@rtbrick: cfg> set interface ifp-0/0/1 unit 4071 address ipv4 10.10.10.1
root@rtbrick: cfg> set interface ifp-0/0/1 unit 4071 address ipv4 20.20.20.1 secondary
true
root@rtbrick: cfg> commit
```

2.5. Assign Logical Interface IPv6 Address

Command to assign an IPv6 address (as primary) to a logical interface on the default instance and verify that the assignment is correct

```
set interface <physical interface> unit <logical-unit-id> address ipv6 <ipv6-address>
```

| | |
|----------------------|--------------------------------|
| <physical interface> | Name of the physical interface |
| <logical-unit-id> | Logical Unit ID |
| <ipv6-address> | IPv6 address to assign |

Example

```
root@rtbrick: cfg> set interface ifp-0/0/1 unit 4071 address ipv6 12:0:1::1/64
root@rtbrick: cfg> commit
```

2.6. Delete Logical Interface IPv4 Address

Command to delete the IPv4 address of a logical interface (without deleting the logical interface itself)

delete interface <physical interface> **unit** <logical-unit-id> **address ipv4** <ipv4-address>

| | |
|----------------------|--------------------------------|
| <physical interface> | Name of the physical interface |
| <logical-unit-id> | Logical Unit ID |
| <ipv4-address> | IPv4 address |

Example

```
root@rtbrick: cfg> delete interface lo-0/0/0 unit 4 address ipv4 4.4.4.4/32
```

2.7. Delete Logical Interface IPv6 Address

Command to delete the IPv6 address of a logical interface (without deleting the logical interface itself)

delete interface <physical interface> **unit** <logical-unit-id> **address ipv6** <ipv6-address>

| | |
|----------------------|--------------------------------|
| <physical interface> | Name of the physical interface |
| <logical-unit-id> | Logical Unit ID |
| <ipv6-address> | IPv6 address |

Example

```
root@rtbrick: cfg> delete interface lo-0/0/0 unit 4 address ipv6 4::4/128
```

2.8. Specifying Interface Description

You can specify a description for the interface by entering the following command:

```
set interface <physical interface> unit <logical-unit-id> description <description>
```

| | |
|----------------------|---|
| <physical interface> | Name of the physical interface |
| <logical-unit-id> | Logical Unit ID |
| <description> | Specifies the description for the interface |

Example

```
root@rtbrick: cfg> set interface ifp-0/0/1 unit 4071 description "leaf1 to spine1"  
root@rtbrick: cfg> commit
```

2.9. Setting the Admin Status of a Physical Interface

To set the admin status of a physical interface, enter the following command:

```
set interface <physical interface> admin-status <status>
```

| | |
|----------------------|---|
| <physical interface> | Name of the physical interface |
| <status> | Specifies the admin status, that is, up or down |

Example

```
root@rtbrick: cfg> set interface ifp-0/0/1 admin-status down  
root@rtbrick: cfg> commit
```

2.10. Disable (Shut Down) a Logical Interface

Command to disable (shut down) a logical interface on the default instance

set interface <physical interface> **unit** <logical-unit-id> **admin-status down**

| | |
|----------------------|-------------------------|
| <physical interface> | Physical interface name |
| <logical-unit-id> | Logical unit ID |

Example

```
root@rtbrick: cfg> set interface ifp-0/0/52 unit 1 admin-status down
```

2.11. Enable a Logical Interface

Command to enable a logical interface that was previously shut down (essentially, delete the disable sent to the interface)

set interface <physical interface> **unit** <logical-unit-id> **admin-status up**

| | |
|----------------------|-------------------------|
| <physical interface> | Physical interface name |
| <logical-unit-id> | Logical Unit ID |

Example

```
root@rtbrick: cfg> set interface ifp-0/0/52 unit 1 admin-status up
```

2.12. Disable IPv4 on a Logical Interface

Command to disable IPv4 on a logical interface on the default instance

set interface <physical interface> **unit** <logical-unit-id> **ipv4-admin-status down**

| | |
|----------------------|-------------------------|
| <physical interface> | Physical interface name |
| <logical-unit-id> | Logical Unit ID |

Example

```
root@rtbrick: cfg> set interface ifp-0/0/52 unit 1 ipv4-admin-status down
```

2.13. Disable IPv6 on a Logical Interface

Command to disable IPv6 on a logical interface on the default instance

set interface <physical interface> **unit** <logical-unit-id> **ipv6-admin-status down**

| | |
|----------------------|-------------------------|
| <physical interface> | Physical interface name |
| <logical-unit-id> | Logical Unit ID |

Example

```
root@rtbrick: cfg> set interface ifp-0/0/52 unit 1 ipv6-admin-status down
```

2.14. Disable MPLS on a Logical Interface

Command to disable MPLS on a logical interface on the default instance

set interface <physical interface> **unit** <logical-unit-id> **mpls-admin-status down**

| | |
|----------------------|-------------------------|
| <physical interface> | Physical interface name |
| <logical-unit-id> | Logical Unit ID |

Example

```
root@rtbrick: cfg> set interface ifp-0/0/52 unit 1 mpls-admin-status down
```

2.15. Enable IPv4 on a Logical Interface

Command to enable IPv4 on a logical interface that was previously shut down.

set interface <physical interface> **unit** <logical-unit-id> **ipv4-admin-status up**

| | |
|----------------------|-------------------------|
| <physical interface> | Physical interface name |
| <logical-unit-id> | Logical Unit ID |

Example

```
root@rtbrick: cfg> set interface ifp-0/0/52 unit 1 ipv4-admin-status up
```

2.16. Enable IPv6 on a Logical Interface

Command to enable IPv6 on a logical interface that was previously shut down.

set interface <physical interface> **unit** <logical-unit-id> **ipv6-admin-status up**

| | |
|----------------------|-------------------------|
| <physical interface> | Physical interface name |
| <logical-unit-id> | Logical Unit ID |

Example

```
root@rtbrick: cfg> set interface ifp-0/0/52 unit 1 ipv6-admin-status up
```

2.17. Enable MPLS on a Logical Interface

Command to enable MPLS on a logical interface that was previously shut down.

set interface <physical interface> **unit** <logical-unit-id> **mpls-admin-status up**

| | |
|----------------------|-------------------------|
| <physical interface> | Physical interface name |
| <logical-unit-id> | Logical Unit ID |

Example

```
root@rtbrick: cfg> set interface ifp-0/0/52 unit 1 mpls-admin-status up
```

2.18. Disable Physical Interfaces

You can disable all the unused physical interfaces.



- Always interface level enable/disable command has higher precedence than the global interface enable/disable command.
- Before executing global interface disable all command ensure that all physical interfaces are in the **link up** state.

To disable all the physical interfaces, enter the following command:

set forwarding-options disable-all-interface state true

The running configuration below shows the configuration changes.

```
"rtbrick-config:forwarding-options": {  
  "disable-all-interface": {  
    "state": "true"  
  }  
}
```

Once global interface disable command is executed all interfaces will be down and to enable an interface, you need to execute command below.

set interface <interface-name> admin-status up

Example

```
root@rtbrick: cfg> set interface ifp-0/0/52 admin-status up
```

If you want to enable all the physical interfaces that you disabled, enter the following command:

set forwarding-options disable-all-interface state false

2.19. Set IPv4, IPv6 or MPLS MTU Size

Command to assign an IPv4, IPv6 or MPLS MTU size to a logical interface

```
set interface <physical interface> unit <logical-unit-id> [ipv4-mtu <mtu-size> | ipv6-mtu <mtu-size> | mpls-mtu <mtu-size>]
```

| | |
|----------------------|-------------------------|
| <physical interface> | Physical interface name |
| <logical-unit-id> | Logical Unit ID |
| <ipv4-mtu> | Set MTU for IPv4 |
| <ipv6-mtu> | Set MTU for IPv6 |
| <mpls-mtu> | Set MTU for MPLS |
| <mtu-size> | Set the size of the MTU |

Example

```

root@rtbrick: cfg> set interface ifp-0/0/1 unit 4071 ipv4-mtu 1500
root@rtbrick: cfg> set interface ifp-0/0/1 unit 4071 ipv6-mtu 1500
root@rtbrick: cfg> set interface ifp-0/0/1 unit 4071 mpls-mtu 1500
root@rtbrick: cfg> commit

```

2.20. Configure an MPLS label with an IPv4 Address

An MPLS label can be configured using the interface address configuration command. Enter the following command to configure a label with an IPv4 Address

set interface <interface-name> **unit** <logical-unit-id> **address** <ipv4> <address>
label <label>

| | |
|-------------------|-------------------------------|
| <interface-name> | Name of the interface |
| <logical-unit-id> | Logical Unit ID |
| <label> | Specifies the interface label |

Example

```

root@rtbrick: cfg> set interface lo-0/0/4 unit 1 address ipv4 192.1.4.3/32
label 12346

```

2.21. Configure Interface Port Speed

Port speed refers to the maximum amount of data transmitted through a port at any given second.

To configure port speed, enter the following command:

set interface <interface> **speed** <speed-value>

| | |
|---------------|--|
| <interface> | Name of the physical interface |
| <speed-value> | Specifies the port speed, which is specified in Gigabits per second (Gbps) |

Example

```

root@rtbrick: cfg> set interface ifp-0/0/1 speed 40G

```

Currently, RBFS supports 10G and 100G ports, and you can make the following changes:

- 100G port speed can be changed to 40G
- 10G port speed can be changed to 1G

2.22. Ping an IPv4 Address that is Part of a VRF Instance

Command to ping the IPv4 address used in the subscriber instance

ping <ipv4-address> **instance** <instance-name>

| | |
|-----------------|--|
| <ipv4-address> | IPv4 address to ping |
| <instance-name> | Name of instance to act on (for example, subscriber) |

Example

```
supervisor@rtbrick: op> ping 192.1.4.3 instance subscriber
68 bytes from 192.1.4.3: icmp_seq=1 ttl=64 time=1.1126 ms
68 bytes from 192.1.4.3: icmp_seq=2 ttl=64 time=.0379 ms
68 bytes from 192.1.4.3: icmp_seq=3 ttl=64 time=.0399 ms
68 bytes from 192.1.4.3: icmp_seq=4 ttl=64 time=.0420 ms
68 bytes from 192.1.4.3: icmp_seq=5 ttl=64 time=.0391 ms
Statistics: 5 sent, 5 received, 0% packet loss
supervisor@rtbrick: op>
```

2.23. Ping an IPv6 Address that is Part of a VRF Instance

Command to ping the IPv6 address used in the subscriber instance

ping6 <ipv6-address> **instance** <instance-name>

| | |
|-----------------|--|
| <ipv6-address> | IPv6 address to ping |
| <instance-name> | Name of instance to act on (for example, subscriber) |

Example

```
supervisor@rtbrick: op> ping6 192:1:4::3 instance subscriber
68 bytes from 192:1:4::3: icmp_seq=1 ttl=64 time=1.1199 ms
68 bytes from 192:1:4::3: icmp_seq=2 ttl=64 time=.0559 ms
68 bytes from 192:1:4::3: icmp_seq=3 ttl=64 time=.0404 ms
68 bytes from 192:1:4::3: icmp_seq=4 ttl=64 time=1.0944 ms
68 bytes from 192:1:4::3: icmp_seq=5 ttl=64 time=.0407 ms
Statistics: 5 sent, 5 received, 0% packet loss
supervisor@rtbrick: op>
```

2.24. Extended Community Support for Static and Interface Routes

After you configure the route and protocol policy, it is recommended to keep them generic using communities so that the future configurations or routes automatically get the desired processing.

Currently there are two items that cannot be "tagged" with a community but need to be operated by policy:

- static routes
- interfaces (interface routes)

The static routes provide a configuration option to add community/extended community.

For the interfaces, a community tag would be inherited to the interface routes (IPv4, IPv6 etc.) which is used by the policy while matching a community.

2.24.1. Community setting for interface routes

```
set interface ifp-0/0/52 unit 4 address ipv4 4.4.4.4/24 community
<community_value1>
set interface ifp-0/0/52 unit 4 address ipv4 4.4.4.4/24 community
<community_value2>

set interface ifp-0/0/52 unit 4 address ipv4 4.4.4.4/24 extended-community
<extended-community1>
set interface ifp-0/0/52 unit 4 address ipv4 4.4.4.4/24 extended-community
<extended-community2>
```

2.25. Configuring Port Mirroring

Port Mirroring is a method of monitoring network traffic. When you enable port mirroring, the switch sends a copy of all network packets seen on one port to another port, where the packet can be analyzed.

Guidelines and Limitations

- You can configure up to 15 mirror profiles.
- The same mirror resources are used for LI and Port Mirroring
- You can configure a CPU port as destination physical interface port; but if heavy traffic is mirrored, it may impact system performance.
- If you want to mirror traffic to CPU, enable the control plane security features. For more refer, see the *Control Plane Security Guide*.

- Since this is a debugging tool, the save and reload functionality is not supported.
- If physical interface/logical interface goes down, mirror configuration will not be deleted automatically. You need to delete the mirror configuration explicitly.

2.25.1. Mirroring one physical interface traffic to another physical interface

You can mirror one physical interface traffic to another physical interface by entering the following command:

set forwarding-options mirror <mirror-name> **destination interface** <interface-name>

set forwarding-options mirror <mirror-name> **source** <direction>

set forwarding-options mirror <mirror-name> **source interface** <interface-name>

| | |
|-------------------|---|
| <mirror_name> | Name for mirror configuration |
| <interface-name> | Port to where you need to mirror traffic |
| <direction> | Direction in which you want to mirror traffic (supported values ingress and egress) |
| <source-ifp-name> | Specifies the port from which you mirror the traffic |

Example

```
supervisor@rtbrick: cfg> set forwarding-options mirror mm destination
interface ifp-0/0/4
supervisor@rtbrick: cfg> set forwarding-options mirror mm source direction
egress                ingress
supervisor@rtbrick: cfg> set forwarding-options mirror mm source direction
int
supervisor@rtbrick: cfg> set forwarding-options mirror mm source direction
ingress
supervisor@rtbrick: cfg> set forwarding-options mirror mm source interface
ifp-0/0/2
```

Example: Mirror Traffic to CPU

```
set forwarding-options mirror mirror1 destination interface cpu-0/0/200
set forwarding-options mirror mirror1 source direction ingress
set forwarding-options mirror mirror1 source interface ifp-0/0/52
```

2.25.2. Mirroring one logical interface traffic to another physical interface

Inbound mirroring is defined per In-Port, or per In-Port x VLAN. Configurations for six distinct VLAN tags, for any other VLAN tag, and for packets without VLAN tags are supported. The ingress mirroring can be sampled by specifying a probability that a matching packet will be mirrored.

Outbound mirroring is defined per Out-Port, or per Out-Port x VLAN tag. Configurations for seven distinct VLAN tags are supported.

Prerequisites

- Before creating logical interface mirroring, the source logical interface should exist.
- The logical interface should not be deleted during mirroring.

You can mirror one logical interface traffic to another physical interface by entering the following command:

set forwarding-options mirror <mirror-name> **destination interface** <interface-name>

set forwarding-options mirror <mirror-name> **source** <direction>

set forwarding-options mirror <mirror-name> **source logical-interface** <logical-interface>

| | |
|---------------------|---|
| <mirror_name> | Name for mirror configuration |
| <interface-name> | Port to where you need to mirror traffic |
| <direction> | Direction in which you want to mirror traffic (supported values ingress and egress) |
| <logical-interface> | Specifies the logical interface from which you are mirroring traffic |

Example

```
set forwarding-options mirror mirror1 destination interface ifp-0/0/2
set forwarding-options mirror mirror1 source direction ingress
set forwarding-options mirror mirror1 source interface ifp-0/0/52
```

2.25.3. Capturing Mirror Traffic

After you configure mirroring to CPU by using the commands above, you can use the **capture** command to capture the mirror traffic.

On the console, enter the following command:

show capture start mirrored

To capture the mirror traffic in a file, enter the following command:

show capture start mirrored file <filename>

Example

```
show capture start mirrored file test.pcap
```

To capture the mirror traffic on console, enter the following command:

```
show capture mirrored
```

2.25.4. Mirror Logical Interface Traffic to CPU

To mirror one logical interface traffic to CPU, enter the following command:

Syntax

```
set forwarding-options mirror <mirror-name> destination interface  
<destination-cpu-interface-name>  
set forwarding-options mirror <mirror-name> source <direction>  
set forwarding-options mirror <mirror-name> source logical-interface  
<logical-interface>
```

| | |
|------------------------|--|
| <mirror_name> | Name for mirror configuration |
| <destination-cpu-name> | CPU to where you need to mirror traffic |
| <source-ifl-name> | Specifies the logical interface from which you are mirroring traffic |

Example

```
set forwarding-options mirror mirror1 destination interface cpu-0/0/200  
set forwarding-options mirror mirror1 source direction ingress  
set forwarding-options mirror mirror1 source interface ifp-0/0/52
```

2.25.5. Deleting Port Mirroring Configuration

You can delete the port mirroring configuration by entering the following command.

```
delete forwarding-options mirror [arg-required] <mirror_name>
```

Example

```
delete forwarding-options mirror mirror1
```

2.26. Host Path Capturing Tool

The sections below explain the various options available in the host path capturing tool to troubleshoot host path issues.

2.26.1. Shared Memory Interface

There is no bds packet tables in fibd, rather there is a pseudo network interface of the form `shm-0/0/<trap-id>`, where the trap-id identifies the protocol (BGP, ISIS, PPPoE, L2TP, RADIUS). You can use the VPP internal command **show rtb-shm** to know the mapping of protocol to trap-id. This command captures the packet exchanges between fibd and other protocol daemons.

```
show capture interface <shm-interface-name> direction <dir>
```

Example

```
show capture interface shm-0/0/1 direction both
```

2.26.2. Logical Interface

In most cases, when you want to troubleshoot, the packets are exchanged with other routers that are connected over a sub interface. The logical interface-level capturing enables this functionality.

Example

```
show capture interface ifl-0/0/52/1 direction both
```

2.26.3. Physical Interface

This is original physical interface-based capture that is supported. It is the entry

point to all packets transmitting to the software. If you want to know if packets are transmitting to software or not you can use this command.

Example

```
show capture interface ifp-0/0/52 direction both
```

2.26.4. Filtering by Protocol

In most cases, while using the logical interface and physical interface, you may want to select a packet belonging to a specific protocol. In that case, you can use the protocol knob available in all the commands to achieve this functionality.

Example

```
show capture interface ifp-0/0/52 direction both protocol bgp  
show capture interface ifl-0/0/52/1 direction both protocol bgp
```

2.26.5. Raw Option Capture tool

The raw option capture tool can decode the packet as well as dump the packet in raw format. The **raw** option is useful if you want to examine packets in hex to check for malformed packets, etc.

Example

```
show capture interface ifl-0/0/52/1 direction both raw  
show capture interface ifp-0/0/52 direction both raw
```

2.26.6. PCAP file format

While debugging a setup with real traffic, displaying the packets on console makes debugging tedious. You can use the **pcap** option to save the packets in the PCAP file and later run tcpdump/wireshark from any Linux system.

Example

```
show capture start interface ifp-0/0/52 direction both file test.pcap  
show capture stop interface ifp-0/0/52 direction both file test.pcap
```

2.27. IP Fragmentation

If the maximum transmission unit (MTU) of an outgoing interface is lesser than the original packet which needs to be routed, the packet needs to be fragmented.

The current RBFS-supported Broadcom DNX chipset has no support for IP fragmentation in hardware. Because of this limitation, these packets are punted to the CPU, and the fragmentation is handled in the CPU. Therefore the rate for these packets is significantly reduced.

If the packet that needs to be fragmented and the Do-Not-Fragment (DF) bit is specified, then the device is going to send an ICMP Error code "fragmentation needed and DF set" to the source.

By default, IPv6 fragmentation is handled at source. When the transit device needs to perform fragmentation, the device sends an ICMP error code "Fragmentation needed and DF set" to the source.

2.27.1. Guidelines and Limitations of IP Fragmentation

The following guidelines and limitations are applicable to IP Fragmentation:

1. If a packet that's larger than 1492 which is negotiated with subscriber will get fragmented
2. The packets that are fragmented do not go over the regular QoS path in the egress pipeline
3. Broadcom supports at most 4 MTU profiles in a single device. This implies that there can only be 4 different kinds of MTU that can be set across all interfaces. With this limitation, the current interfaces can have any one of the following MTU profiles.
 - a. MTU 9216
 - b. MTU 1492
 - c. MTU 1518



By default, all the PPPoE interface will inherit the MTU 1492 profile.

2.28. Firewall Filter Configuration

Firewall filters provide a means of protecting your router (and switch) from excessive traffic transiting the router (and switch) to a network destination or destined for the Routing Engine. Also, firewall filtering restricts traffic destined for the Routing Engine based on its source, protocol, and application.

When you define a firewall filter, you define filtering criteria (terms, with match

conditions) for the packets and an action for the device to take if the packets match the filtering criteria.



The statistics for Firewall Filter/Ascend-Data-Filter is not supported because of a limitation in the supported hardware.

2.28.1. IPv4 Match Configuration (global)

set forwarding-options acl l3v4 rulename <rulename> **ordinal** <ordinal_value>
match [destination-ipv4-prefix | destination-l4-port | direction | ip-protocol |
source-ipv4-prefix | source-l4-port]

| | |
|---------------------------|--|
| <rule_name> | Specifies the firewall filter rule name |
| <ordinal_value> | Specifies the ordinal value that is used for traffic policy rule referencing |
| <destination-ipv4-prefix> | Specifies the IPv4 prefix |
| <destination-l4-port> | Specifies the destination port number |
| <direction> | Ingress direction (Mandatory) |
| <ip-protocol> | Specifies the IP protocol |
| <source-ipv4-prefix> | Specifies the source IPv4 prefix |
| <source-l4-port> | Specifies the source IPv4 address |

Example

```
admin@rtbrick: cfg> set forwarding-options acl l3v4 rule rtb_firewall_two
ordinal 1000 match source-ipv4-prefix 40.1.1.0/24

admin@rtbrick: cfg> set forwarding-options acl l3v4 rule rtb_firewall_two
ordinal 1000 match source-l4-port 8080

admin@rtbrick: cfg> set forwarding-options acl l3v4 rule rtb_firewall_two
ordinal 1000 match direction ingress

admin@rtbrick: cfg> set forwarding-options acl l3v4 rule rtb_firewall_two
ordinal 1000 action drop true
```

2.28.2. IPv6 Match Configuration (global)

set forwarding-options acl l3v6 rulename <rulename> **ordinal** <ordinal_value>
match [destination-ipv6-prefix | destination-l4-port | direction | ip-protocol |
source-ipv6-prefix | source-l4-port]

| | |
|-------------|---|
| <rule_name> | Specifies the firewall filter rule name |
|-------------|---|

| | |
|---------------------------|--|
| <ordinal_value> | Specifies the ordinal value that is used for traffic policy rule referencing |
| <destination-ipv6-prefix> | Specifies the IPv6 prefix |
| <destination-l4-port> | Specifies the destination port number |
| <direction> | Ingress direction (Mandatory) |
| <ip-protocol> | Specifies the IP protocol |
| <source-ipv6-prefix> | Specifies the source IPv6 prefix |
| <source-l4-port> | Specifies the source IPv4 address |

Example

```
admin@rtbrick: cfg> set forwarding-options acl l3v6 rule rtb_firewall_two
ordinal 1000 match direction ingress
admin@rtbrick: cfg> set forwarding-options acl l3v6 rule rtb_firewall_two
ordinal 1000 match source-ipv6-prefix 40::0/64
admin@rtbrick: cfg> set forwarding-options acl l3v6 rule rtb_firewall_two
ordinal 1000 match source-l4-port 8080
admin@rtbrick: cfg> set forwarding-options acl l3v6 rule rtb_firewall_two
ordinal 1000 action permit true
```

2.28.3. IPv4/IPv6 Action Configuration (global)

set forwarding-options acl [**l3v4** | **l3v6**] **rulename** <rulename> **ordinal** <ordinal_value> **action** <action> [**true** | **false**]

| | |
|-----------------|--|
| <rule_name> | Specifies the firewall filter rule name |
| <ordinal_value> | Specifies the ordinal value that is used for traffic policy rule referencing |
| <action> | Specifies the filter action performed, that is, drop or permit |
| <true/false> | True indicates that the specified action is performed. False indicates that the specified action is not performed. |

Example

```
admin@rtbrick: cfg> set forwarding-options acl l3v4 rule rtb_firewall_two
1000 action drop true
```

3. Static Routing

Static Routing allows a network administrator to configure routes manually. Using the RtBrick CLI, you can configure static ipv4, ipv6, MPLS and multicast routes.

3.1. Configure Static Route

To configure static route for ipv4/ipv6, enter the following command:

```
set instance <instance-name> static route <AFI> <prefix> <SAFI> <nexthop-profile>
```

To configure static route for MPLS, enter the following command:

```
set instance <instance-name> static route <AFI> <in-label> <in-bos> <SAFI> <nexthop-profile>
```

| | |
|-------------------|---|
| <instance-name> | Instance name to which destination prefix/label belongs to |
| <AFI> | Address family i.e ipv4, ipv6 and mpls can be given |
| <prefix> | Prefix address for which we wanted to install route |
| <SAFI> | Sub address family i.e unicast or labeled-unicast can be given |
| <in-label> | MPLS Label incoming CFG Key |
| <in-bos> | Incoming label BOS |
| <nexthop-profile> | Nexthop profile name where all nexthop related informaton like nexthop ip address, lookup-instance name, lookup-afi, lookup-safi are present. |

Example

```
set instance default static route ipv4 10.1.1.1/32 unicast nexthop1
set instance default static route mpls 8888 true unicast nexthop1
set instance default static route ipv6 2001:db8:abcd:0012::0/80 unicast
nexthop2
```

Optional route parameters

Currently, you can configure below route parameters:

| | |
|--------------------|--|
| community | Community associated with the route |
| extended-community | Extended community associated with the route |
| swap-label | Label to be swapped |

| | |
|----------|-----------|
| swap-bos | Label BOS |
|----------|-----------|

3.2. Community Configuration

```
set instance default static route ipv4 10.1.1.1/32 unicast nexthop1 community
10:10
```

3.2.1. Extended Community configuration

```
set instance default static route ipv4 10.1.1.1/32 unicast nexthop1 extended-
community target:15:1
```

3.2.2. Configuring nexthop-profile

You can group various nexthop parameters with nexthop-profile name and you can associate this nexthop-profile name with different routes.

Currently, the following nexthop parameters can be configured:

| | |
|-----------------|--|
| exit-interface | Exit interface Name |
| lookup-afi | Lookup routing tables address family where the nexthop will be looked up |
| lookup-instance | Lookup routing tables instance where the nexthop will be looked up |
| lookup-safi | Lookup routing tables sub address family where the nexthop will be looked up |
| nexthop | IPv4/IPv6 nexthop address |
| out-bos | Label BOS |
| out-label | Label that needs to be pushed |

Syntax

```
set instance <instance-name> static nexthop-profile <profile-name>

set instance <instance-name> static nexthop-profile <profile-name> nexthop
<nexthop>

set instance <instance-name> static nexthop-profile <profile-name> exit-
interface <exit-interface>

set instance <instance-name> static nexthop-profile <profile-name> lookup-
afi <lookup-afi>

set instance <instance-name> static nexthop-profile <profile-name> lookup-
instance <lookup-instance>

set instance <instance-name> static nexthop-profile <profile-name> lookup-
safi <lookup-safi >

set instance <instance-name> static nexthop-profile <profile-name> out-
label <out-label>

set instance <instance-name> static nexthop-profile <profile-name> out-bos
<out-bos>
```

Example

nexthop-profile with ipv4 nexthop and out-label

```
set instance default static nexthop-profile nexthop1 nexthop 2.2.2.3
set instance default static nexthop-profile nexthop1 out-label 4444
```

nexthop-profile with ipv6 nexthop

```
set instance default static nexthop-profile nexthop2 nexthop fd3d:3d:100:a::2
```

nexthop-profile with null exit interface (discard route)

```
set instance default static nexthop-profile nexthop3 exit-interface null0
```

nexthop-profile with exit-interface

```
set instance default static nexthop-profile nexthop3 exit-interface ifp-
0/0/4/4
```



If you do not provide lookup-instance, lookup-afi and lookup-safi values default values will be used to install the route.

3.3. Static Multicast Route Configuration

syntax

```
set instance <instance-name> static route multicast4 <source> <group>
<nexthop-profile>
```

| | |
|-------------------|---|
| <instance-name> | Instance name to which source belongs to |
| <source> | IPv4 Multicast stream source address |
| <group> | IPv4 Multicast group address |
| <nexthop-profile> | Nexthop profile name where all nexthop related informaton like nexthop ip address,lookup-instance name, lookup-afi, lookup-safi will present. |

Example

```
set instance default static route multicast4 10.1.1.1/32 232.1.1.1/32
nexthop3
```

3.3.1. Viewing the Static Multicast Route Configuration

```
show config instance <instance-name> static
```

Example

```
show config instance default static
```

3.3.1.1. Delete Static route configuration

To delete Static route configuration of ipv4/ipv6, enter the following command:

```
delete instance <instance-name> static route <AFI> <prefix> <SAFI>
<nexthop-profile>
```

To delete Static route configuration of MPLS, enter the following command:

```
delete instance <instance-name> static route <AFI> <in-label> <in-bos>  
<SAFI> <nexthop-profile>
```

Example

```
delete instance default static route ipv4 10.1.1.1/32 unicast nexthop1  
delete instance default static route ipv6 2001:db8:abcd:0012::0/80 unicast  
nexthop2  
delete instance default static route mpls 8888 true unicast nexthop2
```

To delete Static route configuration of multicast, enter the following command:

```
delete instance <instance-name> static route multicast4 <source>  
<group> <nexthop-profile>
```

Example

```
delete instance default static route multicast4 10.1.1.1/32 232.1.1.1/32  
nexthop3
```

3.3.2. Deleting nexthop-profile

```
delete instance <instance-name> static nexthop-profile <profile-name>
```

Example

```
delete instance default static nexthop-profile nexthop1
```

4. Show Commands

4.1. Instance Commands



The instance-name will be truncated in summary format after certain characters. In such cases full name can be found with detailed command output.

4.1.1. show instance

This command displays all configured instance information in summary format.

```
supervisor@rtbrick: op> show instance
Instance          Router ID          Instance ID  Status
default           192.1.0.3         0           Active
ip2vrf            192.1.4.3         2           Active
li-vrf            192.1.3.3         3           Active
mgmt-vrf          192.1.1.3         4           Active
radius-vrf        192.1.2.3         5           Active
supervisor@rtbrick: op>
```

4.1.2. show instance <instance-name>

This command displays the specified instance-name information in summary format.

```
supervisor@rtbrick: op> show instance ip2vrf
Instance          Router ID          Instance ID  Status
ip2vrf            192.1.4.3         2           Active
supervisor@rtbrick: op>
```

4.1.3. show instance detail

This command displays all configured instance information in detailed format.


```

supervisor@rtbrick: op> show instance detail
Instance: default
  Router ID: 192.1.0.3
  Instance ID: 0
  State: Active
  AFI      SAFI      State      Table ID
  ipv4     unicast   Active     0
  ipv4     multicast Active     0
  ipv4     labeled-unicast Active     1
  ipv6     unicast   Active     0
  ipv6     multicast Active     0
  ipv6     labeled-unicast Active     2
  mpls     unicast   Active     0
Instance: ip2vrf
  Router ID: 192.1.4.3
  Instance ID: 2
  State: Active
  AFI      SAFI      State      Table ID
  ipv4     unicast   Active     3
  ipv4     labeled-unicast Active     4
  ipv6     unicast   Active     5
  ipv6     labeled-unicast Active     6
  mpls     unicast   Active     7

```

4.1.4. show instance <instance-name> detail

This command displays the specified instance-name information in detailed format.

```

supervisor@rtbrick: op> show instance ip2vrf detail
Instance: ip2vrf
  Router ID: 192.1.4.3
  Instance ID: 2
  State: Active
  AFI      SAFI      State      Table ID
  ipv4     unicast   Active     3
  ipv4     labeled-unicast Active     4
  ipv6     unicast   Active     5
  ipv6     labeled-unicast Active     6
  mpls     unicast   Active     7

```

4.2. Neighbor Commands

4.2.1. show neighbor

This command displays the ipv4/ipv6 neighbor information in summary format.

```

supervisor@rtbrick: op> show neighbor
Instance           MAC Address           Interface           IP Address
Dynamic  Entry Time
default           7a:3f:c4:c2:03:01    if1-0/0/2/23
fe80::783f:c4ff:fec2:301  true    Wed Nov 11 09:31:54
default           b8:6a:97:a5:a0:35    if1-0/0/50/13
fe80::ba6a:97ff:fea5:a035  true    Wed Nov 11 09:31:57
default           b8:6a:97:a5:a0:39    if1-0/0/51/131
fe80::ba6a:97ff:fea5:a039  true    Wed Nov 11 09:32:03
ip2vrf           00:19:01:00:00:01    if1-0/0/4/1
192.168.231.1      true    Thu Nov 12 05:08:55

```

4.2.2. show neighbor <afi>

This command displays the specified address family neighbor information in summary format, where AFI can be ipv4 or ipv6.

```

supervisor@rtbrick: op> show neighbor ipv4
Instance           MAC Address           Interface           IP Address
Dynamic  Entry Time
ip2vrf           00:19:01:00:00:01    if1-0/0/4/1
192.168.231.1      true    Thu Nov 12 05:08:55
supervisor@rtbrick: op>

```

4.2.3. show neighbor <afi> instance <instance-name>

This command displays the specified address family (<afi>) and instance (<instance-name>) neighbor information in summary format, where AFI can be ipv4 or ipv6.

```

supervisor@rtbrick: op> show neighbor ipv6 instance default
Instance           MAC Address           Interface           IP Address
Dynamic  Entry Time
default           7a:3f:c4:c2:03:01    if1-0/0/2/23
fe80::783f:c4ff:fec2:301  true    Wed Nov 11 09:31:54
default           b8:6a:97:a5:a0:35    if1-0/0/50/13
fe80::ba6a:97ff:fea5:a035  true    Wed Nov 11 09:31:57
default           b8:6a:97:a5:a0:39    if1-0/0/51/131
fe80::ba6a:97ff:fea5:a039  true    Wed Nov 11 09:32:03
supervisor@rtbrick: op>

```

4.2.4. show neighbor instance <instance-name>

This command displays the specified instance-name neighbor information.

```
supervisor@rtbrick: op> show neighbor instance default
Instance          MAC Address          Interface          IP Address
Dynamic  Entry Time
default          7a:3f:c4:c2:03:01   if1-0/0/2/23
fe80::783f:c4ff:fec2:301 true    Wed Nov 11 09:31:54
default          b8:6a:97:a5:a0:35   if1-0/0/50/13
fe80::ba6a:97ff:fea5:a035 true    Wed Nov 11 09:31:57
default          b8:6a:97:a5:a0:39   if1-0/0/51/131
fe80::ba6a:97ff:fea5:a039 true    Wed Nov 11 09:32:03
```

4.3. Address Resolution Commands

4.3.1. show address-resolution request

This command displays address-resolution request table content in summary format.

```
supervisor@cli1: op> show address-resolution request
TableName: global.mribd.1.address.resolution.request
Next Hop          AFI          SAFI          Instance
100.1.1.1         ipv4         unicast      default
TableName: global.static.1.address.resolution.request
Next Hop          AFI          SAFI          Instance
10.1.1.1          ipv4         unicast      default
20.1.1.1          ipv4         unicast      default
30.1.1.1          ipv4         unicast      default
100.1.1.1         ipv4         unicast      default
```

4.3.2. show address-resolution response

This command displays address-resolution response table content in summary format.

```

supervisor@cli1: op> show address-resolution response
TableName: global.mribd.1.address.resolution.response
IP Address          Covering Prefix      MAC Address
Interface
100.1.1.1           100.1.1.1/32        7a:41:7e:60:00:08
memif-8/8/8/8
TableName: global.static.1.address.resolution.response
IP Address          Covering Prefix      MAC Address
Interface
10.1.1.1            10.1.1.1/32         7a:41:7e:61:01:01
ifl-0/0/52/1
20.1.1.1            20.1.1.1/32         7a:41:7e:62:02:02
ifl-0/0/53/1
30.1.1.1            30.1.1.1/32         7a:41:7e:63:03:03
ifl-0/0/54/1
100.1.1.1           100.1.1.1/32        7a:41:7e:60:00:08
ifl-0/0/55/1

```

4.4. Route Show Commands

4.4.1. show route

This command displays route from all address family sub address family and instance in summary format.

```

supervisor@rtbrick: op> show route
Instance: default, AFI: ipv4, SAFI: unicast
Prefix/Label          Source          Pref  Next Hop
Interface
192.1.1.0.3/32        direct          0     192.1.0.3
lo-0/0/0/1

Instance: default, AFI: ipv4, SAFI: labeled-unicast
Prefix/Label          Source          Pref  Next Hop
Interface            Label
192.1.1.0.3/32        direct          0     192.1.0.3
lo-0/0/0/1            -

Instance: default, AFI: ipv6, SAFI: unicast
Prefix/Label          Source          Pref  Next Hop
Interface
192:1::1/128          bgp             20
fe80::ba6a:97ff:fea5:a035  ifl-0/0/50/13
192:1::2/128          bgp             20
fe80::783f:c4ff:fec2:301  ifl-0/0/2/23
192:1::3/128          direct          0     192:1::3
lo-0/0/0/1
192:1::4/128          bgp             20
fe80::ba6a:97ff:fea5:a035  ifl-0/0/50/13

```

4.4.2. show route detail

This command displays route from all address family sub address family and instance in detailed format.

```

supervisor@rtbrick: op> show route detail
Instance: default, AFI: ipv4, SAFI: unicast
192.1.1.0.3/32
  Source: direct, Preference: 0
  Next Hop: 192.1.0.3
    Next Hop type: glean, Next Hop action: trap to cpu
    Resolved in: default-ipv4-unicast
    Egress interface: lo-0/0/0/1

Instance: default, AFI: ipv4, SAFI: labeled-unicast
192.1.1.0.3/32
  Source: direct, Preference: 0
  Next Hop: 192.1.0.3
    Next Hop type: glean, Next Hop action: trap to cpu
    Resolved in: default-ipv4-labeled-unicast
    Egress interface: lo-0/0/0/1

Instance: default, AFI: ipv6, SAFI: unicast
192:1::1/128
  Source: bgp, Preference: 20
  Next Hop: fe80::ba6a:97ff:fea5:a035
    Covering prefix: fe80::ba6a:97ff:fea5:a035/128
    Next Hop type: direct, Next Hop action: None
    Resolved in: default-ipv6-unicast
    Egress interface: if1-0/0/50/13, NextHop MAC: b8:6a:97:a5:a0:35
    Created: Thu Nov 12 05:08:57 GMT +0000 2020

```

4.4.3. show route prefix <prefix/label>

This command displays the specified prefix information from all address family, sub address family and instance in summary format.

```

supervisor@rtbrick: op> show route prefix 192:1:2::3/128
Instance: radius-vrf, AFI: ipv6, SAFI: unicast
Prefix/Label          Source          Pref    Next Hop
Interface
192:1:2::3/128        direct          0       192:1:2::3
lo-0/0/2/1

Instance: radius-vrf, AFI: ipv6, SAFI: labeled-unicast
Prefix/Label          Source          Pref    Next Hop
Interface              Label
192:1:2::3/128        direct          0       192:1:2::3
lo-0/0/2/1            -

```

4.4.4. show route prefix <prefix/label> detail

This command displays the specified prefix information from all address family, sub address family and instance in detail format.

```

supervisor@rtbrick: op> show route prefix 192:1:2::3/128 detail
Instance: radius-vrf, AFI: ipv6, SAFI: unicast
192:1:2::3/128
  Source: direct, Preference: 0
  Next Hop: 192:1:2::3
    Next Hop type: glean, Next Hop action: trap to cpu
    Resolved in: radius-vrf-ipv6-unicast
    Egress interface: lo-0/0/2/1

Instance: radius-vrf, AFI: ipv6, SAFI: labeled-unicast
192:1:2::3/128
  Source: direct, Preference: 0
  Next Hop: 192:1:2::3
    Next Hop type: glean, Next Hop action: trap to cpu
    Resolved in: radius-vrf-ipv6-labeled-unicast
    Egress interface: lo-0/0/2/1

```

4.4.5. show route source <source>

This command displays routes from all address family , sub address family and instance with given route source in summary format.

```

supervisor@rtbrick: op> show route source bgp
Instance: default, AFI: ipv6, SAFI: unicast
Prefix/Label          Source          Pref    Next Hop
Interface
192:1::1/128          bgp            20
fe80::ba6a:97ff:fea5:a035  if1-0/0/50/13
192:1::2/128          bgp            20
fe80::783f:c4ff:fec2:301  if1-0/0/2/23
192:1::4/128          bgp            20
fe80::ba6a:97ff:fea5:a035  if1-0/0/50/13

Instance: default, AFI: ipv6, SAFI: labeled-unicast
Prefix/Label          Source          Pref    Next Hop
Interface          Label
192:1::1/128          bgp            20
fe80::ba6a:97ff:fea5:a035  if1-0/0/50/13  -
192:1::2/128          bgp            20
fe80::783f:c4ff:fec2:301  if1-0/0/2/23  -
192:1::4/128          bgp            20
fe80::ba6a:97ff:fea5:a035  if1-0/0/50/13  2004

```

4.4.6. show route source <source> detail

This command displays routes from all address family, sub address family and instance for the specified route source in detailed format.

```

supervisor@rtbrick: op> show route source bgp detail
Instance: default, AFI: ipv6, SAFI: unicast
192:1::1/128
  Source: bgp, Preference: 20
  Next Hop: fe80::ba6a:97ff:fea5:a035
  Covering prefix: fe80::ba6a:97ff:fea5:a035/128
  Next Hop type: direct, Next Hop action: None
  Resolved in: default-ipv6-unicast
  Egress interface: if1-0/0/50/13, NextHop MAC: b8:6a:97:a5:a0:35
  Created: Thu Nov 12 05:08:57 GMT +0000 2020
192:1::2/128
  Source: bgp, Preference: 20
  Next Hop: fe80::783f:c4ff:fec2:301
  Covering prefix: fe80::783f:c4ff:fec2:301/128
  Next Hop type: direct, Next Hop action: None
  Resolved in: default-ipv6-unicast
  Egress interface: if1-0/0/2/23, NextHop MAC: 7a:3f:c4:c2:03:01
  Created: Thu Nov 12 05:08:57 GMT +0000 2020

```

4.4.7. show route source <source> prefix <prefix>

This command displays route information for the specified source and prefix.

```

supervisor@rtbrick: op> show route source bgp prefix 192:1:2::1/128
Instance: radius-vrf, AFI: ipv6, SAFI: unicast
Prefix/Label          Source          Pref  Next Hop
Interface
192:1:2::1/128       bgp             20    192:1::1
if1-0/0/50/13

```

4.4.8. show route source <source> prefix <prefix> detail

This command displays route information for the specified source and prefix in detailed format.

```

supervisor@rtbrick: op> show route source bgp prefix 192:1:2::1/128 detail
Instance: radius-vrf, AFI: ipv6, SAFI: unicast
192:1:2::1/128
  Source: bgp, Preference: 20
  Next Hop: 192:1::1
  Covering prefix: 192:1::1/128
  Next Hop type: mpls ingress, Next Hop action: mpls label push
  Resolved in: default-ipv6-labeled-unicast
  Egress interface: if1-0/0/50/13, NextHop MAC: b8:6a:97:a5:a0:35
  MPLS-Label: 20023,bos:1
  Created: Thu Nov 12 05:08:57 GMT +0000 2020

```

4.4.9. show route source <source> instance <instance-name>

This command displays route information for the specified source and instance name.

```

supervisor@rtbrick: op> show route source bgp instance radius-vrf
Instance: radius-vrf, AFI: ipv4, SAFI: unicast
Prefix/Label                               Source           Pref    Next Hop
Interface
0.0.0.0/0                                   bgp              20
fe80::ba6a:97ff:fea5:a035                 if1-0/0/50/13
192.1.2.1/32                               bgp              20
fe80::ba6a:97ff:fea5:a035                 if1-0/0/50/13
192.1.2.2/32                               bgp              20      192:1::2
if1-0/0/2/23
192.1.2.4/32                               bgp              20      192:1::4
if1-0/0/50/13

```

4.4.10. show route source <source> instance <instance-name> detail

This command displays route information for the specified source, instance name in detailed format.


```

supervisor@rtbrick: op> show route source bgp instance radius-vrf detail
Instance: radius-vrf, AFI: ipv4, SAFI: unicast
0.0.0.0/0
  Source: bgp, Preference: 20
    Next Hop: fe80::ba6a:97ff:fea5:a035
      Covering prefix: fe80::ba6a:97ff:fea5:a035/128
      Next Hop type: mpls ingress, Next Hop action: mpls label push
      Resolved in: default-ipv6-labeled-unicast
      Egress interface: ifl-0/0/50/13, NextHop MAC: b8:6a:97:a5:a0:35
      MPLS-Label: 20021,bos:1
      Created: Thu Nov 12 05:08:57 GMT +0000 2020
192.1.2.1/32
  Source: bgp, Preference: 20
    Next Hop: fe80::ba6a:97ff:fea5:a035
      Covering prefix: fe80::ba6a:97ff:fea5:a035/128
      Next Hop type: mpls ingress, Next Hop action: mpls label push
      Resolved in: default-ipv6-labeled-unicast
      Egress interface: ifl-0/0/50/13, NextHop MAC: b8:6a:97:a5:a0:35
      MPLS-Label: 20021,bos:1
      Created: Thu Nov 12 05:08:57 GMT +0000 2020

```

4.4.11. show route source <source> instance <instance-name> prefix <prefix>

This command displays route information for the specified source, instance name and prefix.

```

supervisor@rtbrick: op> show route source bgp instance radius-vrf prefix
192.1.2.1/32
Instance: radius-vrf, AFI: ipv4, SAFI: unicast
Prefix/Label          Source          Pref    Next Hop
Interface
192.1.2.1/32          bgp             20
fe80::ba6a:97ff:fea5:a035  ifl-0/0/50/13

```

4.4.12. show route source <source> instance <instance-name> prefix <prefix> detail

This command displays route information for the specified source, instance name and prefix in detailed format.

```

supervisor@rtbrick: op> show route source bgp instance radius-vrf prefix
192.1.2.1/32 detail
Instance: radius-vrf, AFI: ipv4, SAFI: unicast
192.1.2.1/32
  Source: bgp, Preference: 20
    Next Hop: fe80::ba6a:97ff:fea5:a035
      Covering prefix: fe80::ba6a:97ff:fea5:a035/128
      Next Hop type: mpls ingress, Next Hop action: mpls label push
      Resolved in: default-ipv6-labeled-unicast
      Egress interface: if1-0/0/50/13, NextHop MAC: b8:6a:97:a5:a0:35
      MPLS-Label: 20021,bos:1
      Created: Thu Nov 12 05:08:57 GMT +0000 2020

```

4.4.13. show route instance <instance-name>

This command displays route information for the specified instance name.

```

supervisor@rtbrick: op> show route instance li-vrf
Instance: li-vrf, AFI: ipv4, SAFI: unicast
Prefix/Label                               Source                Pref    Next Hop
Interface
0.0.0.0/0                                   bgp                   20
fe80::ba6a:97ff:fea5:a035                 if1-0/0/50/13
192.1.3.1/32                                bgp                   20
fe80::ba6a:97ff:fea5:a035                 if1-0/0/50/13
192.1.3.2/32                                bgp                   20      192:1::2
if1-0/0/2/23
192.1.3.3/32                                direct                0      192.1.3.3
lo-0/0/3/1
192.1.3.4/32                                bgp                   20      192:1::4
if1-0/0/50/13

```

4.4.14. show route instance <instance-name> detail

This command displays route information for the specified instance name in detailed format.

```

supervisor@rtbrick: op> show route instance li-vrf detail
Instance: li-vrf, AFI: ipv4, SAFI: unicast
0.0.0.0/0
  Source: bgp, Preference: 20
  Next Hop: fe80::ba6a:97ff:fea5:a035
    Covering prefix: fe80::ba6a:97ff:fea5:a035/128
    Next Hop type: mpls ingress, Next Hop action: mpls label push
    Resolved in: default-ipv6-labeled-unicast
    Egress interface: ifl-0/0/50/13, NextHop MAC: b8:6a:97:a5:a0:35
    MPLS-Label: 20009,bos:1
    Created: Thu Nov 12 05:08:57 GMT +0000 2020
192.1.3.1/32
  Source: bgp, Preference: 20
  Next Hop: fe80::ba6a:97ff:fea5:a035
    Covering prefix: fe80::ba6a:97ff:fea5:a035/128
    Next Hop type: mpls ingress, Next Hop action: mpls label push
    Resolved in: default-ipv6-labeled-unicast
    Egress interface: ifl-0/0/50/13, NextHop MAC: b8:6a:97:a5:a0:35
    MPLS-Label: 20009,bos:1
    Created: Thu Nov 12 05:08:57 GMT +0000 2020

```

4.4.15. show route instance <instance-name> prefix <prefix>

This command displays route information for the specified instance name and prefix.

```

supervisor@rtbrick: op> show route instance li-vrf prefix 192:1:3::3/128
Instance: li-vrf, AFI: ipv6, SAFI: unicast
Prefix/Label          Source          Pref    Next Hop
Interface
192:1:3::3/128       direct         0       192:1:3::3
lo-0/0/3/1

Instance: li-vrf, AFI: ipv6, SAFI: labeled-unicast
Prefix/Label          Source          Pref    Next Hop
Interface             Label
192:1:3::3/128       direct         0       192:1:3::3
lo-0/0/3/1           -

```

4.4.16. show route instance <instance-name> prefix <prefix> detail

This command displays route information for the specified instance name and prefix in detailed format.

```

supervisor@rtbrick: op> show route instance li-vrf prefix 192:1:3::3/128
detail
Instance: li-vrf, AFI: ipv6, SAFI: unicast
192:1:3::3/128
  Source: direct, Preference: 0
  Next Hop: 192:1:3::3
    Next Hop type: glean, Next Hop action: trap to cpu
    Resolved in: li-vrf-ipv6-unicast
    Egress interface: lo-0/0/3/1

Instance: li-vrf, AFI: ipv6, SAFI: labeled-unicast
192:1:3::3/128
  Source: direct, Preference: 0
  Next Hop: 192:1:3::3
    Next Hop type: glean, Next Hop action: trap to cpu
    Resolved in: li-vrf-ipv6-labeled-unicast
    Egress interface: lo-0/0/3/1

```

4.4.17. show route <afi>

This command displays route information for the specified address family identifier.

```

supervisor@rtbrick: op> show route ipv4
Instance: default, AFI: ipv4, SAFI: unicast
Prefix/Label          Source          Pref    Next Hop
Interface
192.1.0.3/32          direct          0       192.1.0.3
lo-0/0/0/1

Instance: default, AFI: ipv4, SAFI: labeled-unicast
Prefix/Label          Source          Pref    Next Hop
Interface             Label
192.1.0.3/32          direct          0       192.1.0.3
lo-0/0/0/1            -

```

4.4.18. show route <afi> detail

This command displays route information for the specified address family identifier in detailed format.

```

supervisor@rtbrick: op> show route ipv4 detail
Instance: default, AFI: ipv4, SAFI: unicast
192.1.0.3/32
  Source: direct, Preference: 0
  Next Hop: 192.1.0.3
    Next Hop type: glean, Next Hop action: trap to cpu
    Resolved in: default-ipv4-unicast
    Egress interface: lo-0/0/0/1

Instance: default, AFI: ipv4, SAFI: labeled-unicast
192.1.0.3/32
  Source: direct, Preference: 0
  Next Hop: 192.1.0.3
    Next Hop type: glean, Next Hop action: trap to cpu
    Resolved in: default-ipv4-labeled-unicast
    Egress interface: lo-0/0/0/1
    
```

4.4.19. show route <afi> prefix <prefix>

This command displays route information for the specified address family identifier and prefix.

```

supervisor@rtbrick: op> show route ipv4 prefix 192.1.2.3/32
Instance: radius-vrf, AFI: ipv4, SAFI: unicast
Prefix/Label          Source          Pref  Next Hop
Interface
192.1.2.3/32          direct          0     192.1.2.3
lo-0/0/2/1

Instance: radius-vrf, AFI: ipv4, SAFI: labeled-unicast
Prefix/Label          Source          Pref  Next Hop
Interface              Label
192.1.2.3/32          direct          0     192.1.2.3
lo-0/0/2/1            -
    
```

4.4.20. show route <afi> prefix <prefix> detail

This command displays route information for the specified address family identifier and prefix in detailed format.

```

supervisor@rtbrick: op> show route ipv4 prefix 192.1.2.3/32 detail
Instance: radius-vrf, AFI: ipv4, SAFI: unicast
192.1.2.3/32
  Source: direct, Preference: 0
    Next Hop: 192.1.2.3
      Next Hop type: glean, Next Hop action: trap to cpu
      Resolved in: radius-vrf-ipv4-unicast
      Egress interface: lo-0/0/2/1

Instance: radius-vrf, AFI: ipv4, SAFI: labeled-unicast
192.1.2.3/32
  Source: direct, Preference: 0
    Next Hop: 192.1.2.3
      Next Hop type: glean, Next Hop action: trap to cpu
      Resolved in: radius-vrf-ipv4-labeled-unicast
      Egress interface: lo-0/0/2/1

```

4.4.21. show route <afi> source <source>

This command displays route information for the specified address family identifier and source.

```

supervisor@rtbrick: op> show route ipv4 source direct
Instance: default, AFI: ipv4, SAFI: unicast
Prefix/Label          Source          Pref   Next Hop
Interface
192.1.0.3/32         direct         0     192.1.0.3
lo-0/0/0/1

Instance: default, AFI: ipv4, SAFI: labeled-unicast
Prefix/Label          Source          Pref   Next Hop
Interface             Label
192.1.0.3/32         direct         0     192.1.0.3
lo-0/0/0/1           -

```

4.4.22. show route <afi> source <source> detail

This command displays route information for the specified address family identifier and source in detailed format.

```

supervisor@rtbrick: op> show route ipv4 source direct detail
Instance: default, AFI: ipv4, SAFI: unicast
192.1.1.0.3/32
  Source: direct, Preference: 0
  Next Hop: 192.1.0.3
    Next Hop type: glean, Next Hop action: trap to cpu
    Resolved in: default-ipv4-unicast
    Egress interface: lo-0/0/0/1

Instance: default, AFI: ipv4, SAFI: labeled-unicast
192.1.1.0.3/32
  Source: direct, Preference: 0
  Next Hop: 192.1.0.3
    Next Hop type: glean, Next Hop action: trap to cpu
    Resolved in: default-ipv4-labeled-unicast
    Egress interface: lo-0/0/0/1
    
```

4.4.23. show route <afi> source <source> prefix <prefix>

This command displays route information for the specified address family identifier, source, and prefix.

```

supervisor@rtbrick: op> show route ipv4 source direct prefix 192.1.2.3/32
Instance: radius-vrf, AFI: ipv4, SAFI: unicast
Prefix/Label          Source          Pref    Next Hop
Interface
192.1.2.3/32         direct          0       192.1.2.3
lo-0/0/2/1

Instance: radius-vrf, AFI: ipv4, SAFI: labeled-unicast
Prefix/Label          Source          Pref    Next Hop
Interface             Label
192.1.2.3/32         direct          0       192.1.2.3
lo-0/0/2/1           -
    
```

4.4.24. show route <afi> source <source> prefix <prefix> detail

This command displays route information for the specified address family identifier, source, and prefix in detailed format.

```

supervisor@rtbrick: op> show route ipv4 source direct prefix 192.1.2.3/32
detail
Instance: radius-vrf, AFI: ipv4, SAFI: unicast
192.1.2.3/32
  Source: direct, Preference: 0
  Next Hop: 192.1.2.3
  Next Hop type: glean, Next Hop action: trap to cpu
  Resolved in: radius-vrf-ipv4-unicast
  Egress interface: lo-0/0/2/1

Instance: radius-vrf, AFI: ipv4, SAFI: labeled-unicast
192.1.2.3/32
  Source: direct, Preference: 0
  Next Hop: 192.1.2.3
  Next Hop type: glean, Next Hop action: trap to cpu
  Resolved in: radius-vrf-ipv4-labeled-unicast
  Egress interface: lo-0/0/2/1

```

4.4.25. show route <afi> source <source> instance <instance-name>

This command displays route information for the specified address family identifier, source, and instance name.

```

supervisor@rtbrick: op> show route ipv4 source direct instance mgmt-vrf
Instance: mgmt-vrf, AFI: ipv4, SAFI: unicast
Prefix/Label          Source          Pref    Next Hop
Interface
192.1.1.3/32         direct          0       192.1.1.3
lo-0/0/1/1

Instance: mgmt-vrf, AFI: ipv4, SAFI: labeled-unicast
Prefix/Label          Source          Pref    Next Hop
Interface             Label
192.1.1.3/32         direct          0       192.1.1.3
lo-0/0/1/1           -
supervisor@rtbrick: op>

```

4.4.26. show route <afi> source <source> instance <instance-name> detail

This command displays route information for the specified address family identifier, source, and instance name in detailed format.


```

supervisor@rtbrick: op> show route ipv6 source direct instance mgmt-vrf
detail
Instance: mgmt-vrf, AFI: ipv6, SAFI: unicast
192:1:1::3/128
  Source: direct, Preference: 0
  Next Hop: 192:1:1::3
  Next Hop type: glean, Next Hop action: trap to cpu
  Resolved in: mgmt-vrf-ipv6-unicast
  Egress interface: lo-0/0/1/1

Instance: mgmt-vrf, AFI: ipv6, SAFI: labeled-unicast
192:1:1::3/128
  Source: direct, Preference: 0
  Next Hop: 192:1:1::3
  Next Hop type: glean, Next Hop action: trap to cpu
  Resolved in: mgmt-vrf-ipv6-labeled-unicast
  Egress interface: lo-0/0/1/1

```

4.4.27. show route <afi> source <source> instance <instance-name> prefix <prefix>

This command displays route information for the specified address family identifier, instance and prefix.

```

supervisor@rtbrick: op> show route ipv6 source direct instance mgmt-vrf
prefix 192:1:1::3/128
Instance: mgmt-vrf, AFI: ipv6, SAFI: unicast
Prefix/Label          Source          Pref    Next Hop
Interface
192:1:1::3/128       direct          0       192:1:1::3
lo-0/0/1/1

Instance: mgmt-vrf, AFI: ipv6, SAFI: labeled-unicast
Prefix/Label          Source          Pref    Next Hop
Interface             Label
192:1:1::3/128       direct          0       192:1:1::3
lo-0/0/1/1           -

```

4.4.28. show route <afi> source <source> instance <instance-name> prefix <prefix> detail

This command displays route information for the specified address family identifier, instance and prefix in detailed format.

```

supervisor@rtbrick: op> show route ipv6 source direct instance mgmt-vrf
prefix 192:1:1::3/128 detail
Instance: mgmt-vrf, AFI: ipv6, SAFI: unicast
192:1:1::3/128
  Source: direct, Preference: 0
  Next Hop: 192:1:1::3
  Next Hop type: glean, Next Hop action: trap to cpu
  Resolved in: mgmt-vrf-ipv6-unicast
  Egress interface: lo-0/0/1/1

Instance: mgmt-vrf, AFI: ipv6, SAFI: labeled-unicast
192:1:1::3/128
  Source: direct, Preference: 0
  Next Hop: 192:1:1::3
  Next Hop type: glean, Next Hop action: trap to cpu
  Resolved in: mgmt-vrf-ipv6-labeled-unicast
  Egress interface: lo-0/0/1/1

```

4.4.29. show route <afi> <safi>

This command displays route information for the specified address family.

```

supervisor@rtbrick: op> show route mpls unicast
Instance: default, AFI: mpls, SAFI: unicast
Prefix/Label          Source          Pref   Next Hop
Interface
2001                   bgp             170
fe80::ba6a:97ff:fea5:a035  if1-0/0/50/13
2002                   bgp             170
fe80::783f:c4ff:fec2:301  if1-0/0/2/23
2004                   bgp             170
fe80::ba6a:97ff:fea5:a035  if1-0/0/50/13

```

4.4.30. show route <afi> <safi> detail

This command displays route information for the specified address family in detailed format.

```

supervisor@rtbrick: op> show route mpls unicast detail
Instance: default, AFI: mpls, SAFI: unicast
2001
  Source: bgp, Preference: 170
  Next Hop: fe80::ba6a:97ff:fea5:a035
  Covering prefix: fe80::ba6a:97ff:fea5:a035/128
  Next Hop type: mpls php, Next Hop action: mpls label pop - next
protocol ipv6
  Resolved in: default-ipv6-labeled-unicast
  Egress interface: if1-0/0/50/13, NextHop MAC: b8:6a:97:a5:a0:35
  Created: Thu Nov 12 05:08:57 GMT +0000 2020
2002
  Source: bgp, Preference: 170
  Next Hop: fe80::783f:c4ff:fec2:301
  Covering prefix: fe80::783f:c4ff:fec2:301/128
  Next Hop type: mpls php, Next Hop action: mpls label pop - next
protocol ipv6
  Resolved in: default-ipv6-labeled-unicast
  Egress interface: if1-0/0/2/23, NextHop MAC: 7a:3f:c4:c2:03:01
  Created: Thu Nov 12 05:08:57 GMT +0000 2020

```

4.4.31. show route <afi> <safi> prefix <prefix>

This command displays route information for the specified address family and prefix.

```

supervisor@rtbrick: op> show route ipv6 unicast prefix 192:1:4::3/128
Instance: ip2vrf, AFI: ipv6, SAFI: unicast
Prefix/Label          Source          Pref    Next Hop
Interface
192:1:4::3/128       direct         0       192:1:4::3
lo-0/0/4/1

32) show route <afi> <safi> prefix <prefix> detail
supervisor@rtbrick: op> show route ipv6 unicast prefix 192:1:4::3/128 detail

Instance: ip2vrf, AFI: ipv6, SAFI: unicast
192:1:4::3/128
  Source: direct, Preference: 0
  Next Hop: 192:1:4::3
  Next Hop type: glean, Next Hop action: trap to cpu
  Resolved in: ip2vrf-ipv6-unicast
  Egress interface: lo-0/0/4/1

```

4.4.32. show route <afi> <safi> source <source>

This command displays route information for the specified address family and source.

```

supervisor@rtbrick: op> show route ipv6 unicast source direct
Instance: default, AFI: ipv6, SAFI: unicast
Prefix/Label          Source          Pref  Next Hop
Interface
192:1::3/128          direct          0     192:1::3
lo-0/0/0/1

Instance: ip2vrf, AFI: ipv6, SAFI: unicast
Prefix/Label          Source          Pref  Next Hop
Interface
192:1:4::3/128        direct          0     192:1:4::3
lo-0/0/4/1

```

4.4.33. show route <afi> <safi> source <source> detail

This command displays route information for the specified address family, and source in detailed format.

```

supervisor@rtbrick: op> show route ipv6 unicast source direct detail
Instance: default, AFI: ipv6, SAFI: unicast
192:1::3/128
  Source: direct, Preference: 0
  Next Hop: 192:1::3
    Next Hop type: glean, Next Hop action: trap to cpu
    Resolved in: default-ipv6-unicast
    Egress interface: lo-0/0/0/1

```

4.4.34. show route <afi> <safi> source <source> prefix <prefix>

This command displays route information for the specified address family, source, and prefix.

```

supervisor@rtbrick: op> show route ipv6 unicast source direct prefix
192:1:4::3/128
Instance: ip2vrf, AFI: ipv6, SAFI: unicast
Prefix/Label          Source          Pref  Next Hop
Interface
192:1:4::3/128        direct          0     192:1:4::3
lo-0/0/4/1

```

4.4.35. show route <afi> <safi> source <source> prefix <prefix> detail

This command displays route information for the specified address family, source, and prefix in detailed format.

```

supervisor@rtbrick: op> show route ipv6 unicast source direct prefix
192:1:4::3/128 detail
Instance: ip2vrf, AFI: ipv6, SAFI: unicast
192:1:4::3/128
  Source: direct, Preference: 0
    Next Hop: 192:1:4::3
      Next Hop type: glean, Next Hop action: trap to cpu
      Resolved in: ip2vrf-ipv6-unicast
      Egress interface: lo-0/0/4/1

```

4.4.36. show route <afi> <safi> source <source> instance <instance-name>

This command displays route information for the specified address family, source, and instance name.

```

supervisor@rtbrick: op> show route ipv6 unicast source direct instance ip2vrf
Instance: ip2vrf, AFI: ipv6, SAFI: unicast
Prefix/Label                               Source           Pref    Next Hop
Interface
192:1:4::3/128                             direct           0       192:1:4::3
lo-0/0/4/1

```

4.4.37. show route <afi> <safi> source <source> instance <instance-name> detail

This command displays route information for the specified address family, source, and instance name in detailed format.

```

supervisor@rtbrick: op> show route ipv6 unicast source direct instance ip2vrf
detail
Instance: ip2vrf, AFI: ipv6, SAFI: unicast
192:1:4::3/128
  Source: direct, Preference: 0
    Next Hop: 192:1:4::3
      Next Hop type: glean, Next Hop action: trap to cpu
      Resolved in: ip2vrf-ipv6-unicast
      Egress interface: lo-0/0/4/1

```

4.4.38. show route <afi> <safi> source <source> instance <instance-name> prefix <prefix>

This command displays route information for the specified address family, source, instance, and prefix.

```

supervisor@rtbrick: op> show route ipv6 unicast source direct instance ip2vrf
prefix 192:1:4::3/128
Instance: ip2vrf, AFI: ipv6, SAFI: unicast
Prefix/Label          Source          Pref    Next Hop
Interface
192:1:4::3/128        direct          0       192:1:4::3
lo-0/0/4/1

```

4.4.39. show route <afi> <safi> source <source> instance <instance-name> prefix <prefix> detail

This command displays route information for the specified address family, source, instance, and prefix in detailed format.

```

supervisor@rtbrick: op> show route ipv6 unicast source direct instance ip2vrf
prefix 192:1:4::3/128 detail
Instance: ip2vrf, AFI: ipv6, SAFI: unicast
192:1:4::3/128
  Source: direct, Preference: 0
  Next Hop: 192:1:4::3
    Next Hop type: glean, Next Hop action: trap to cpu
    Resolved in: ip2vrf-ipv6-unicast
    Egress interface: lo-0/0/4/1

```

5. Interface Show Commands

5.1. show interface physical

This command displays all the physical interface including loopback, cpu and recycle ports.

```

supervisor@rtbrick: op> show interface physical
Interface          Admin  Link   Oper   MAC Address          Speed  Duplex
Uptime
lo-0/0/1           Up     Up     Up     80:a2:35:a0:00:01   -      -
Thu Nov 19 10:41:06 GMT +0000 2020
ifp-0/0/1          Up     Down   Down   80:a2:35:ee:a8:01   10G    Full
Mon Nov 16 11:24:09 GMT +0000 2020
ifp-0/0/2          Up     Down   Down   80:a2:35:ee:a8:02   10G    Full
Mon Nov 16 11:24:09 GMT +0000 2020
ifp-0/0/3          Up     Down   Down   80:a2:35:ee:a8:03   10G    Full
Mon Nov 16 11:24:09 GMT +0000 2020
ifp-0/0/4          Up     Up     Up     80:a2:35:ee:a8:04   10G    Full
Thu Nov 19 10:05:02 GMT +0000 2020
ifp-0/0/5          Up     Down   Down   80:a2:35:ee:a8:05   10G    Full
Mon Nov 16 11:24:09 GMT +0000 2020
ifp-0/0/6          Up     Down   Down   80:a2:35:ee:a8:06   10G    Full
Mon Nov 16 11:24:09 GMT +0000 2020
ifp-0/0/7          Up     Down   Down   80:a2:35:ee:a8:07   10G    Full
Mon Nov 16 11:24:09 GMT +0000 2020
ifp-0/0/8          Up     Down   Down   80:a2:35:ee:a8:08   10G    Full
Mon Nov 16 11:24:09 GMT +0000 2020
ifp-0/0/9          Up     Down   Down   80:a2:35:ee:a8:09   10G    Full
Mon Nov 16 11:24:09 GMT +0000 2020
ifp-0/0/10         Up     Up     Up     80:a2:35:ee:a8:0a   10G    Full
Fri Nov 20 00:59:12 GMT +0000 2020
ifp-0/0/11         Up     Down   Down   80:a2:35:ee:a8:0b   10G    Full
Mon Nov 16 11:24:09 GMT +0000 2020
ifp-0/0/12         Up     Down   Down   80:a2:35:ee:a8:0c   10G    Full
Mon Nov 16 11:24:09 GMT +0000 2020
ifp-0/0/13         Up     Down   Down   80:a2:35:ee:a8:0d   10G    Full
Mon Nov 16 11:24:09 GMT +0000 2020
ifp-0/0/14         Up     Down   Down   80:a2:35:ee:a8:0e   10G    Full
Mon Nov 16 11:24:09 GMT +0000 2020
ifp-0/0/15         Up     Down   Down   80:a2:35:ee:a8:0f   10G    Full
Mon Nov 16 11:24:09 GMT +0000 2020
ifp-0/0/16         Up     Down   Down   80:a2:35:ee:a8:10   10G    Full
Mon Nov 16 11:24:09 GMT +0000 2020
ifp-0/0/17         Up     Down   Down   80:a2:35:ee:a8:11   10G    Full
Mon Nov 16 11:24:09 GMT +0000 2020
ifp-0/0/18         Up     Down   Down   80:a2:35:ee:a8:12   10G    Full
Mon Nov 16 11:24:09 GMT +0000 2020
ifp-0/0/19         Up     Down   Down   80:a2:35:ee:a8:13   10G    Full
Mon Nov 16 11:24:09 GMT +0000 2020
ifp-0/0/20         Up     Down   Down   80:a2:35:ee:a8:14   10G    Full
Mon Nov 16 11:24:09 GMT +0000 2020
ifp-0/0/21         Up     Down   Down   80:a2:35:ee:a8:15   10G    Full
Mon Nov 16 11:24:09 GMT +0000 2020

```

| | | | | | | |
|---------------------|-----|-------|------|-------------------|------|------|
| ifp-0/0/22 | Up | Down | Down | 80:a2:35:ee:a8:16 | 10G | Full |
| Mon Nov 16 11:24:09 | GMT | +0000 | 2020 | | | |
| ifp-0/0/23 | Up | Down | Down | 80:a2:35:ee:a8:17 | 10G | Full |
| Mon Nov 16 11:24:09 | GMT | +0000 | 2020 | | | |
| ifp-0/0/24 | Up | Down | Down | 80:a2:35:ee:a8:18 | 10G | Full |
| Mon Nov 16 11:24:09 | GMT | +0000 | 2020 | | | |
| ifp-0/0/25 | Up | Down | Down | 80:a2:35:ee:a8:19 | 10G | Full |
| Mon Nov 16 11:24:09 | GMT | +0000 | 2020 | | | |
| ifp-0/0/26 | Up | Down | Down | 80:a2:35:ee:a8:1a | 10G | Full |
| Mon Nov 16 11:24:09 | GMT | +0000 | 2020 | | | |
| ifp-0/0/27 | Up | Up | Up | 80:a2:35:ee:a8:1b | 10G | Full |
| Fri Nov 20 00:59:11 | GMT | +0000 | 2020 | | | |
| ifp-0/0/28 | Up | Down | Down | 80:a2:35:ee:a8:1c | 10G | Full |
| Mon Nov 16 11:24:09 | GMT | +0000 | 2020 | | | |
| ifp-0/0/29 | Up | Down | Down | 80:a2:35:ee:a8:1d | 10G | Full |
| Mon Nov 16 11:24:09 | GMT | +0000 | 2020 | | | |
| ifp-0/0/30 | Up | Down | Down | 80:a2:35:ee:a8:1e | 10G | Full |
| Mon Nov 16 11:24:09 | GMT | +0000 | 2020 | | | |
| ifp-0/0/31 | Up | Down | Down | 80:a2:35:ee:a8:1f | 10G | Full |
| Mon Nov 16 11:24:09 | GMT | +0000 | 2020 | | | |
| ifp-0/0/32 | Up | Down | Down | 80:a2:35:ee:a8:20 | 10G | Full |
| Mon Nov 16 11:24:09 | GMT | +0000 | 2020 | | | |
| ifp-0/0/33 | Up | Down | Down | 80:a2:35:ee:a8:21 | 10G | Full |
| Mon Nov 16 11:24:09 | GMT | +0000 | 2020 | | | |
| ifp-0/0/34 | Up | Down | Down | 80:a2:35:ee:a8:22 | 10G | Full |
| Mon Nov 16 11:24:09 | GMT | +0000 | 2020 | | | |
| ifp-0/0/35 | Up | Down | Down | 80:a2:35:ee:a8:23 | 10G | Full |
| Mon Nov 16 11:24:09 | GMT | +0000 | 2020 | | | |
| ifp-0/0/36 | Up | Down | Down | 80:a2:35:ee:a8:24 | 10G | Full |
| Mon Nov 16 11:24:09 | GMT | +0000 | 2020 | | | |
| ifp-0/0/37 | Up | Down | Down | 80:a2:35:ee:a8:25 | 10G | Full |
| Mon Nov 16 11:24:09 | GMT | +0000 | 2020 | | | |
| ifp-0/0/38 | Up | Down | Down | 80:a2:35:ee:a8:26 | 10G | Full |
| Mon Nov 16 11:24:09 | GMT | +0000 | 2020 | | | |
| ifp-0/0/39 | Up | Down | Down | 80:a2:35:ee:a8:27 | 10G | Full |
| Mon Nov 16 11:24:09 | GMT | +0000 | 2020 | | | |
| ifp-0/0/40 | Up | Down | Down | 80:a2:35:ee:a8:28 | 10G | Full |
| Mon Nov 16 11:24:09 | GMT | +0000 | 2020 | | | |
| ifp-0/0/41 | Up | Down | Down | 80:a2:35:ee:a8:29 | 10G | Full |
| Mon Nov 16 11:24:09 | GMT | +0000 | 2020 | | | |
| ifp-0/0/42 | Up | Down | Down | 80:a2:35:ee:a8:2a | 10G | Full |
| Mon Nov 16 11:24:09 | GMT | +0000 | 2020 | | | |
| ifp-0/0/43 | Up | Down | Down | 80:a2:35:ee:a8:2b | 10G | Full |
| Mon Nov 16 11:24:09 | GMT | +0000 | 2020 | | | |
| ifp-0/0/44 | Up | Down | Down | 80:a2:35:ee:a8:2c | 10G | Full |
| Mon Nov 16 11:24:09 | GMT | +0000 | 2020 | | | |
| ifp-0/0/45 | Up | Down | Down | 80:a2:35:ee:a8:2d | 10G | Full |
| Mon Nov 16 11:24:09 | GMT | +0000 | 2020 | | | |
| ifp-0/0/46 | Up | Down | Down | 80:a2:35:ee:a8:2e | 10G | Full |
| Mon Nov 16 11:24:09 | GMT | +0000 | 2020 | | | |
| ifp-0/0/47 | Up | Down | Down | 80:a2:35:ee:a8:2f | 10G | Full |
| Mon Nov 16 11:24:09 | GMT | +0000 | 2020 | | | |
| ifp-0/0/48 | Up | Down | Down | 80:a2:35:ee:a8:30 | 10G | Full |
| Mon Nov 16 11:24:09 | GMT | +0000 | 2020 | | | |
| ifp-0/0/49 | Up | Down | Down | 80:a2:35:ee:a8:31 | 100G | Full |
| Mon Nov 16 11:24:09 | GMT | +0000 | 2020 | | | |
| ifp-0/0/50 | Up | Down | Down | 80:a2:35:ee:a8:35 | 100G | Full |
| Mon Nov 16 11:24:09 | GMT | +0000 | 2020 | | | |


```

ifp-0/0/51      Up      Down   Down   80:a2:35:ee:a8:39  100G  Full
Mon Nov 16 11:24:09 GMT +0000 2020
ifp-0/0/52      Up      Up     Up     80:a2:35:ee:a8:3d  100G  Full
Tue Nov 17 14:10:46 GMT +0000 2020
ifp-0/0/53      Up      Up     Up     80:a2:35:ee:a8:41  100G  Full
Fri Nov 20 00:59:12 GMT +0000 2020
ifp-0/0/54      Up      Down   Down   80:a2:35:ee:a8:45  100G  Full
Mon Nov 16 11:24:09 GMT +0000 2020
cpu-0/0/200     Up      Up     Up     80:a2:35:ee:a8:c8  100G  Full
Mon Nov 16 11:24:11 GMT +0000 2020
cpu-0/0/201     Up      Down   Down   80:a2:35:ee:a8:c9  100G  Full
Mon Nov 16 11:24:09 GMT +0000 2020
cpu-0/0/202     Up      Down   Down   80:a2:35:ee:a8:ca  100G  Full
Mon Nov 16 11:24:09 GMT +0000 2020
cpu-0/0/203     Up      Down   Down   80:a2:35:ee:a8:cb  100G  Full
Mon Nov 16 11:24:09 GMT +0000 2020
recycle-0/0/75  Up      Up     Up     80:a2:35:ee:a8:4b  100G  Full
Mon Nov 16 11:24:11 GMT +0000 2020
recycle-0/0/76  Up      Up     Up     80:a2:35:ee:a8:4c  100G  Full
Mon Nov 16 11:24:11 GMT +0000 2020

```

5.2. show interface <interface-name>

This command displays summary output of interface and its logical interface if any.

```

supervisor@rtbrick: op> show interface ifp-0/0/52
Interface Admin Link Oper IPv4 Address IPv6 Address
ifp-0/0/52 Up Up Up
ifl-0/0/52/4 Up Up Up 4.4.4.4/24 fe80::82a2:35ff:feee:a83d/128

```

5.3. show interface logical

This command display all the logical interface in the system including loopback, cpu and recycle logical ports.

```

supervisor@rtbrick: op> show interface logical
Interface          Instance          Admin  Link   Oper   Outer VLAN
Inner VLAN IPv4 Status,MTU IPv6 Status,MTU
ifl-0/0/10/100     default          Up     Up     Up     -
-                Up,1500          Up,1500
ifl-0/0/10/200     default          Up     Up     Up     200
-                Up,1500          Up,1500
ifl-0/0/10/300     default          Up     Up     Up     300
-                Up,1500          Up,1500

```

5.4. show interface logical instance default

This command displays all logical interface in the instance including loopback, cpu and recycle logical ports.

```

supervisor@rtbrick: op> show interface logical instance default
Interface          Instance          Admin  Link   Oper   Outer VLAN
Inner VLAN IPv4 Status,MTU   IPv6 Status,MTU
ifl-0/0/10/100    default          Up     Up     Up     -
-                Up,1500         Up,1500
ifl-0/0/10/200    default          Up     Up     Up     200
-                Up,1500         Up,1500
ifl-0/0/10/300    default          Up     Up     Up     300
-                Up,1500         Up,1500

```

5.5. show interface address

This command displays all ipv4 and ipv6 address in the system.

```

supervisor@rtbrick: op> show interface address
Interface          Instance          IPv4 Address          IPv4
Primary IPv6 Address
ifl-0/0/10/100    default          2.2.2.2/24           True
fe80::82a2:35ff:feee:a80a/128
ifl-0/0/10/200    default          3.3.3.2/24           True
fe80::c9:80a2:35ff:feee:a80a/128
ifl-0/0/10/300    default          -
fe80::12d:80a2:35ff:feee:a80a/128

```

5.6. show interface address instance default

This command displays all address in the instance includes both ipv4 and ipv6.

```

supervisor@rtbrick: op> show interface address instance default
Interface          Instance          IPv4 Address          IPv4
Primary IPv6 Address
ifl-0/0/10/100    default          2.2.2.2/24           True
fe80::82a2:35ff:feee:a80a/128
ifl-0/0/10/200    default          3.3.3.2/24           True
fe80::c9:80a2:35ff:feee:a80a/128
ifl-0/0/10/300    default          -
fe80::12d:80a2:35ff:feee:a80a/128

```

5.7. show interface summary

This command displays output for all the interface including physical and logical and its configured address.

```

supervisor@rtbrick: op> show interface summary
Interface          Admin  Link   Oper   IPv4 Address
IPv6 Address
ifp-0/0/1          Up     Down  Down

```

| | | | | |
|-----------------------------------|----|------|------|------------|
| ifp-0/0/2 | Up | Down | Down | |
| ifp-0/0/3 | Up | Down | Down | |
| ifp-0/0/4 | Up | Up | Up | |
| ifp-0/0/5 | Up | Down | Down | |
| ifp-0/0/6 | Up | Down | Down | |
| ifp-0/0/7 | Up | Down | Down | |
| ifp-0/0/8 | Up | Down | Down | |
| ifp-0/0/9 | Up | Down | Down | |
| ifp-0/0/10 | Up | Up | Up | |
| ifl-0/0/10/100 | Up | Up | Up | 2.2.2.2/24 |
| fe80::82a2:35ff:feee:a80a/128 | | | | |
| ifl-0/0/10/200 | Up | Up | Up | 3.3.3.2/24 |
| fe80::c9:80a2:35ff:feee:a80a/128 | | | | |
| ifl-0/0/10/300 | Up | Up | Up | - |
| fe80::12d:80a2:35ff:feee:a80a/128 | | | | |
| ifp-0/0/11 | Up | Down | Down | |
| ifp-0/0/12 | Up | Down | Down | |
| ifp-0/0/13 | Up | Down | Down | |
| ifp-0/0/14 | Up | Down | Down | |
| ifp-0/0/15 | Up | Down | Down | |
| ifp-0/0/16 | Up | Down | Down | |
| ifp-0/0/17 | Up | Down | Down | |
| ifp-0/0/18 | Up | Down | Down | |
| ifp-0/0/19 | Up | Down | Down | |
| ifp-0/0/20 | Up | Down | Down | |
| ifp-0/0/21 | Up | Down | Down | |
| ifp-0/0/22 | Up | Down | Down | |
| ifp-0/0/23 | Up | Down | Down | |
| ifp-0/0/24 | Up | Down | Down | |
| ifp-0/0/25 | Up | Down | Down | |
| ifp-0/0/26 | Up | Down | Down | |
| ifp-0/0/27 | Up | Up | Up | |
| ifp-0/0/28 | Up | Down | Down | |
| ifp-0/0/29 | Up | Down | Down | |
| ifp-0/0/30 | Up | Down | Down | |
| ifp-0/0/31 | Up | Down | Down | |
| ifp-0/0/32 | Up | Down | Down | |
| ifp-0/0/33 | Up | Down | Down | |
| ifp-0/0/34 | Up | Down | Down | |
| ifp-0/0/35 | Up | Down | Down | |
| ifp-0/0/36 | Up | Down | Down | |
| ifp-0/0/37 | Up | Down | Down | |
| ifp-0/0/38 | Up | Down | Down | |
| ifp-0/0/39 | Up | Down | Down | |
| ifp-0/0/40 | Up | Down | Down | |
| ifp-0/0/41 | Up | Down | Down | |
| ifp-0/0/42 | Up | Down | Down | |
| ifp-0/0/43 | Up | Down | Down | |
| ifp-0/0/44 | Up | Down | Down | |
| ifp-0/0/45 | Up | Down | Down | |
| ifp-0/0/46 | Up | Down | Down | |
| ifp-0/0/47 | Up | Down | Down | |
| ifp-0/0/48 | Up | Down | Down | |
| ifp-0/0/49 | Up | Down | Down | |
| ifp-0/0/50 | Up | Down | Down | |
| ifp-0/0/51 | Up | Down | Down | |
| ifp-0/0/52 | Up | Up | Up | |
| ifp-0/0/53 | Up | Up | Up | |

```

ifp-0/0/54           Up           Down       Down
cpu-0/0/200         Up           Up          Up
cpu-0/0/201         Up           Down       Down
cpu-0/0/202         Up           Down       Down
cpu-0/0/203         Up           Down       Down
recycle-0/0/75      Up           Up          Up
  recycle-0/0/75/0  Up           Up          Up
recycle-0/0/76      Up           Up          Up
  recycle-0/0/76/0  Up           Up          Up

```

5.8. show interface <interface-name>

This command displays summarised output for specific physical port.

```

supervisor@rtbrick: op> show interface ifp-0/0/10
Interface           Admin    Link    Oper    IPv4 Address
IPv6 Address
ifp-0/0/10          Up       Up       Up
  ifl-0/0/10/100    Up       Up       Up       2.2.2.2/24
fe80::82a2:35ff:feee:a80a/128
  ifl-0/0/10/200    Up       Up       Up       3.3.3.2/24
fe80::c9:80a2:35ff:feee:a80a/128
  ifl-0/0/10/300    Up       Up       Up       -
fe80::12d:80a2:35ff:feee:a80a/128
  ifl-0/0/10/1000   Up       Up       Up       -
fe80::3e9:80a2:35ff:feee:a80a/128

```

5.9. show interface <interface-name> detail

This command displays detailed output for specific physical port and logical ports under it.

```

supervisor@rtbrick: op> show interface ifp-0/0/10 detail
Interface:ifp-0/0/52
Admin/Link/Operational status: Up/Up/Up
Speed configured: 100G
Speed maximum: 100G
Duplex: Full
Autonegotiation: Disabled
Encapsulation mode: ieee
MTU: 16360
Maximum frame size: 16360
Interface type: ethernet
Interface index: 124929
MAC: 80:a2:35:ee:a8:3d
Uptime: Tue Nov 17 14:10:46 GMT +0000 2020
Description: Physical interface #52 from node 0, chip 0
Packet statistics:
Rx packets: 16034 Tx packets: 17295
Rx bytes: 1602124 Tx bytes: 1711264
Interface:ifl-0/0/52/4, Instance:default
Admin/Link/Operational status: Up/Up/Up
IPv4/IPv6/MPLS Status: Up/Up/Up
IPv4/IPv6/MPLS MTU: 1500/1500/1500
Interface type: Logical Sub interface
Interface index: 106497
MAC: 80:a2:35:ee:a8:3d

IPv4 Address IPv6 Address
4.4.4.4/24 fe80::82a2:35ff:feee:a83d/128

Packet statistics:
Ingress forwarded packets: 16000
Ingress forwarded bytes: 1598656
Ingress drop Packets: 0
Ingress drop bytes: 0
Egress forwarded packets: 0
Egress forwarded bytes: 0
Egress drop packets: 0
Egress drop bytes: 0

```

5.10. show interface <interface-name> statistics

This command displays detailed statistics output for specific physical port and logical ports under it.

```

supervisor@rtbrick: op> show interface ifp-0/0/10 statistics
Interface: ifp-0/0/10

```

| Counter | Direction | Unit | Rx | Rx Diff | Rx Rate |
|---------|-----------|---------|----|---------|---------|
| Tx | Tx Diff | Tx Rate | | | |
| IPv4 | - | Packets | - | - | - |
| - | - | Bytes | - | - | - |
| IPv6 | - | Packets | - | - | - |

| | | | | | | |
|---------|-----------------------|----|---------|--------|---|---|
| - | - | - | Bytes | - | - | - |
| - | MPLS | - | Packets | - | - | - |
| - | - | - | Bytes | - | - | - |
| - | Punt | - | Packets | - | - | - |
| - | - | - | Bytes | - | - | - |
| - | Miss | RX | Packets | - | - | - |
| - | - | - | Bytes | - | - | - |
| - | Drops | - | Packets | 4995 | - | - |
| - | - | - | Bytes | - | - | - |
| - | Error | RX | Packets | - | - | - |
| - | - | - | Bytes | - | - | - |
| - | Error | TX | Packets | 47 | - | - |
| - | - | - | Bytes | - | - | - |
| - | No Buff | RX | Packets | - | - | - |
| - | - | - | Bytes | - | - | - |
| - | Traffic Statistics | - | Packets | 4995 | - | - |
| 68492 | - | - | Bytes | 489510 | - | - |
| 5869876 | - | - | Packets | - | - | - |
| - | Unicast Statistics | - | Bytes | - | - | - |
| - | - | - | Packets | - | - | - |
| - | Broadcast Statistics | - | Bytes | - | - | - |
| - | - | - | Packets | - | - | - |
| - | Multicast Statistics | - | Bytes | - | - | - |
| - | - | - | Packets | - | - | - |
| - | - | - | Bytes | - | - | - |
| - | Bcm Statistics: | - | - | - | - | - |
| - | inOctets: | - | 511632 | - | - | - |
| - | inUcastPkts: | - | 0 | - | - | - |
| - | inNonUcastPkts: | - | 5016 | - | - | - |
| - | inErrors: | - | 0 | - | - | - |
| - | inUnknownProtos: | - | 0 | - | - | - |
| - | outOctets: | - | 6236484 | - | - | - |
| - | outUcastPkts: | - | 0 | - | - | - |
| - | outNonUcastPkts: | - | 68492 | - | - | - |
| - | outErrors: | - | 0 | - | - | - |
| - | etherStatsDropEvents: | - | 0 | - | - | - |

```
etherStatsMulticastPkts: 67718
etherStatsBroadcastPkts: 5790
etherStatsUndersizePkts: 0
etherStatsFragments: 0
etherStatsOversizePkts: 0
etherStatsOctets: 6748116
etherStatsPkts: 73508
etherStatsCollisions: 0
etherStatsTXNoErrors: 68492
etherStatsRXNoErrors: 5016
ifInMulticastPkts: 5016
ifOutBroadcastPkts: 5790
ifOutMulticastPkts: 62702
ifOutBroadcastPkts: 5790
bcmReceivedUndersizePkts: 0
bcmTransmittedUndersizePkts: 5790
bcmQmxDot1dBasePortDelayExceededDiscards: 0
bcmQmxDot1dBasePortMtuExceededDiscards: 0
bcmQmxDot1dTpPortInFrames: 5016
bcmQmxDot1dTpPortOutFrames: 68492
bcmQmxEtherStatsPkts64Octets: 5790
bcmQmxEtherStatsPkts128to255Octets: 24
bcmQmxEtherStatsPkts256to511Octets: 0
bcmQmxEtherStatsPkts512to1023Octets: 0
bcmQmxEtherStatsPkts1024to1518Octets: 0
bcmQmxEtherRxOversizePkts: 0
bcmQmxEtherTxOversizePkts: 0
bcmQmxEtherStatsJabbers: 0
bcmQmxEtherStatsCRCAlignErrors: 0
bcmQmxDot3StatsFCSErrors: 0
bcmQmxDot3StatsSingleCollisionFrames: 0
bcmQmxDot3StatsMultipleCollisionFrames: 0
bcmQmxDot3StatsSQETTestErrors: 0
bcmQmxDot3StatsDeferredTransmissions: 0
bcmQmxDot3StatsLateCollisions: 0
bcmQmxDot3StatsExcessiveCollisions: 0
bcmQmxDot3StatsInternalMacTransmitErrors: 0
bcmQmxDot3StatsCarrierSenseErrors: 0
bcmQmxDot3StatsFrameTooLongs: 0
bcmQmxDot3StatsInternalMacReceiveErrors: 0
bcmQmxDot3StatsSymbolErrors: 0
bcmQmxDot3ControlInUnknownOpCodes: 0
bcmQmxDot3InPauseFrames: 0
bcmQmxDot3OutPauseFrames: 0
bcmQmxIfHCInOctets: 511632
bcmQmxIfHCInUcastPkts: 0
bcmQmxIfHCInMulticastPkts: 5016
bcmQmxIfHCInBroadcastPkts: 0
bcmQmxIfHCOutOctets: 6236484
bcmQmxIfHCOutUcastPkts: 0
bcmQmxIfHCOutMulticastPkts: 62702
bcmQmxIfHCOutBroadcastPkts: 5790
bcmQmxIeee8021PfcRequests: 0
bcmQmxIeee8021PfcIndications: 0
bcmQmxBcmEtherStatsPkts1519to1522Octets: 0
bcmQmxBcmEtherStatsPkts1522to2047Octets: 0
bcmQmxBcmReceivedPkts64Octets: 0
bcmQmxBcmReceivedPkts65to127Octets: 5016
```

```

bcmQmxBcmReceivedPkts128to255Octets: 0
bcmQmxBcmReceivedPkts256to511Octets: 0
bcmQmxBcmReceivedPkts512to1023Octets: 0
bcmQmxBcmReceivedPkts1024to1518Octets: 0
bcmQmxBcmReceivedPkts1519to2047Octets: 0
bcmQmxBcmTransmittedPkts64Octets: 5790
bcmQmxBcmTransmittedPkts65to127Octets: 62678
bcmQmxBcmTransmittedPkts128to255Octets: 24
bcmQmxBcmTransmittedPkts256to511Octets: 0
bcmQmxBcmTransmittedPkts512to1023Octets: 0
bcmQmxBcmTransmittedPkts1024to1518Octets: 0
bcmQmxBcmTransmittedPkts1519to2047Octets: 0
bcmQmxBcmTransmittedPkts2048to4095Octets: 0
bcmQmxBcmTransmittedPkts4095to9216Octets: 0

```

Logical Interface: ifl-0/0/10/100, Physical Interface: ifp-0/0/10

| Counter | Direction | Unit | Rx | Rx Diff | Rx Rate |
|--------------------|-----------|---------|--------|---------|---------|
| Tx | | | | | |
| | Tx Diff | Tx Rate | | | |
| IPv4 | - | Packets | - | - | - |
| - | - | Bytes | - | - | - |
| IPv6 | - | Packets | - | - | - |
| - | - | Bytes | - | - | - |
| MPLS | - | Packets | - | - | - |
| - | - | Bytes | - | - | - |
| Punt | - | Packets | - | - | - |
| - | - | Bytes | - | - | - |
| Miss | RX | Packets | - | - | - |
| - | - | Bytes | - | - | - |
| Drops | - | Packets | 4995 | - | - |
| - | - | Bytes | - | - | - |
| Error | RX | Packets | - | - | - |
| - | - | Bytes | - | - | - |
| Error | TX | Packets | 47 | - | - |
| - | - | Bytes | - | - | - |
| No Buff | RX | Packets | - | - | - |
| - | - | Bytes | - | - | - |
| Traffic Statistics | - | Packets | 4995 | - | - |
| 68492 | - | Bytes | 489510 | - | - |
| 5869876 | - | | | | |


```

Unicast Statistics - Packets - - -
- - -
- - - Bytes - - -
Broadcast Statistics - Packets - - -
- - -
- - - Bytes - - -
Multicast Statistics - Packets - - -
- - -
- - - Bytes - - -

Packet Statistics:
  Ingress Forwarded Packets: 1810
  Ingress Forwarded Bytes: 184620
  Ingress Drop Packets: 1
  Ingress Drop Bytes: 102
  Egress Forwarded Packets: 0
  Egress Forwarded Bytes: 0
  Egress Drop Packets: 0
  Egress Drop Bytes: 0
Logical Interface: ifl-0/0/10/200, Physical Interface: ifp-0/0/10
Counter          Direction  Unit      Rx      Rx Diff  Rx Rate
Tx               Tx Diff  Tx Rate
IPv4
-               -        -          Packets -        -        -
-               -        -          Bytes   -        -        -
IPv6
-               -        -          Packets -        -        -
-               -        -          Bytes   -        -        -
MPLS
-               -        -          Packets -        -        -
-               -        -          Bytes   -        -        -
Punt
-               -        -          Packets -        -        -
-               -        -          Bytes   -        -        -
Miss
-               -        RX         Packets -        -        -
-               -        -          Bytes   -        -        -
Drops
-               -        -          Packets -        -        -
-               -        -          Bytes   -        -        -
Error
-               -        RX         Packets -        -        -
-               -        -          Bytes   -        -        -
Error
-               -        TX         Packets -        -        -
-               -        -          Bytes   -        -        -
No Buff
-               -        RX         Packets -        -        -

```

| | | | | | | |
|------------------------------------|----------------------------|--------------------------------|---------|---------|---------|---|
| - | - | - | Bytes | - | - | - |
| - | Traffic Statistics | - | Packets | - | - | - |
| 6811 | - | - | Bytes | - | - | - |
| 573170 | - | - | Packets | - | - | - |
| - | Unicast Statistics | - | Bytes | - | - | - |
| - | - | - | Packets | - | - | - |
| - | Broadcast Statistics | - | Bytes | - | - | - |
| - | - | - | Packets | - | - | - |
| - | Multicast Statistics | - | Bytes | - | - | - |
| - | - | - | Packets | - | - | - |
| - | - | - | Bytes | - | - | - |
| - | Packet Statistics: | | | | | |
| | Ingress Forwarded Packets: | 0 | | | | |
| | Ingress Forwarded Bytes: | 0 | | | | |
| | Ingress Drop Packets: | 0 | | | | |
| | Ingress Drop Bytes: | 0 | | | | |
| | Egress Forwarded Packets: | 0 | | | | |
| | Egress Forwarded Bytes: | 0 | | | | |
| | Egress Drop Packets: | 0 | | | | |
| | Egress Drop Bytes: | 0 | | | | |
| Logical Interface: ifl-0/0/10/300, | | Physical Interface: ifp-0/0/10 | | | | |
| Counter | Direction | Unit | Rx | Rx Diff | Rx Rate | |
| Tx | Tx Diff | Tx Rate | | | | |
| IPv4 | - | - | Packets | - | - | - |
| - | - | - | Bytes | - | - | - |
| IPv6 | - | - | Packets | - | - | - |
| - | - | - | Bytes | - | - | - |
| MPLS | - | - | Packets | - | - | - |
| - | - | - | Bytes | - | - | - |
| Punt | - | - | Packets | - | - | - |
| - | - | - | Bytes | - | - | - |
| Miss | - | RX | Packets | - | - | - |
| - | - | - | Bytes | - | - | - |
| Drops | - | - | Packets | - | - | - |
| - | - | - | Bytes | - | - | - |
| Error | - | RX | Packets | - | - | - |
| - | - | - | Bytes | - | - | - |
| - | - | - | Bytes | - | - | - |

```

Error TX Packets - - -
- - -
Bytes - - -
No Buff RX Packets - - -
- - -
Bytes - - -
Traffic Statistics - Packets - - -
5902 - -
Bytes - - -
531180 - -
Unicast Statistics - Packets - - -
- - -
Bytes - - -
Broadcast Statistics - Packets - - -
- - -
Bytes - - -
Multicast Statistics - Packets - - -
- - -
Bytes - - -
- - -
Packet Statistics:
  Ingress Forwarded Packets: 0
  Ingress Forwarded Bytes: 0
  Ingress Drop Packets: 0
  Ingress Drop Bytes: 0
  Egress Forwarded Packets: 0
  Egress Forwarded Bytes: 0
  Egress Drop Packets: 0
  Egress Drop Bytes: 0
supervisor@rtbrick: op>

```

5.11. show interface <interface-name> statistics

This command displays detailed statistics output for specific logical ports.

```

supervisor@rtbrick: op> show interface ifl-0/0/10/100 statistics
Logical Interface: ifl-0/0/10/100, Physical Interface: ifp-0/0/10
Counter Direction Unit Rx Rx Diff Rx Rate
Tx Tx Diff Tx Rate
IPv4 - Packets - - -
- - -
Bytes - - -
IPv6 - Packets - - -
- - -
Bytes - - -
MPLS - Packets - - -
- - -
Bytes - - -
- - -

```

```

Punt - - - Packets - - -
- - - Bytes - - -
- - - RX Packets - - -
- - - Bytes - - -
- - - RX Packets 4998 - - -
- - - Bytes - - -
- - - RX Packets - - -
- - - Bytes - - -
- - - TX Packets 47 - - -
- - - Bytes - - -
- - - RX Packets - - -
- - - Bytes - - -
Traffic Statistics - Packets 4998 - -
68522 - - Bytes 489804 - -
5872472 - -
Unicast Statistics - Packets - - -
- - - Bytes - - -
Broadcast Statistics - Packets - - -
- - - Bytes - - -
Multicast Statistics - Packets - - -
- - - Bytes - - -

Packet Statistics:
  Ingress Forwarded Packets: 1813
  Ingress Forwarded Bytes: 184926
  Ingress Drop Packets: 1
  Ingress Drop Bytes: 102
  Egress Forwarded Packets: 0
  Egress Forwarded Bytes: 0
  Egress Drop Packets: 0
  Egress Drop Bytes: 0
supervisor@rtbrick: op>
supervisor@rtbrick: op> show interface ifl-0/0/10/100 detail
Interface:ifl-0/0/10/100, Instance:default
  Admin/Link/Operational Status: Up/Up/Up
  IPv4/IPv6/MPLS Status: Up/Up/Up
  IPv4/IPv6/MPLS MTU: 1500/1500/1500
  Interface Type: Logical Sub interface
  Interface index: 20481
  MAC: 80:a2:35:ee:a8:0a

```

```

Class-of-Service: pta_8queues_comp_on_S

IPv4 Address          IPv6 Address
2.2.2.2/24           fe80::82a2:35ff:feee:a80a/128

Packet Statistics:
  Ingress Forwarded Packets: 1813
  Ingress Forwarded Bytes: 184926
  Ingress Drop Packets: 1
  Ingress Drop Bytes: 102
  Egress Forwarded Packets: 0
  Egress Forwarded Bytes: 0
  Egress Drop Packets: 0
  Egress Drop Bytes: 0
supervisor@rtbrick: op>

```

5.12. show interface detail

This command displays the detailed output for all ports.

```

supervisor@rtbrick: op> show interface detail
Interface          Admin   Link   Oper          IPv4 Address
IPv6 Address
Interface:ifp-0/0/1
  Admin/Link/Operational Status: Up/Down/Down
  Speed configured: 10G
  Speed maximum: 10G
  Duplex: Full
  Autonegotiation: Disabled
  Encapsulation mode: ieee
  MTU: 16360
  Maximum Frame Size: 16360
  Interface Type: ethernet
  Interface index: 2049
  MAC: 80:a2:35:ee:a8:01
  Uptime: Wed Nov 11 14:55:53 GMT +0000 2020
  Description: Physical interface #1 from node 0, chip 0
  Packet Statistics:
    Rx Packets: 0          Tx Packets: 0
    Rx Bytes: 0           Tx Bytes: 0
Interface:ifp-0/0/2
  Admin/Link/Operational Status: Up/Down/Down
  Speed configured: 10G
  Speed maximum: 10G
  Duplex: Full
  Autonegotiation: Disabled
  Encapsulation mode: ieee
  MTU: 16360
  Maximum Frame Size: 16360
  Interface Type: ethernet
  Interface index: 4097
  MAC: 80:a2:35:ee:a8:02
  Uptime: Wed Nov 11 14:55:53 GMT +0000 2020
  Description: Physical interface #2 from node 0, chip 0
  Packet Statistics:

```

```
Rx Packets: 0          Tx Packets: 0
Rx Bytes: 0           Tx Bytes: 0
Interface:ifp-0/0/3
  Admin/Link/Operational Status: Up/Down/Down
  Speed configured: 10G
  Speed maximum: 10G
  Duplex: Full
  Autonegotiation: Disabled
  Encapsulation mode: ieee
  MTU: 16360
  Maximum Frame Size: 16360
  Interface Type: ethernet
  Interface index: 6145
  MAC: 80:a2:35:ee:a8:03
  Uptime: Wed Nov 11 14:55:53 GMT +0000 2020
  Description: Physical interface #3 from node 0, chip 0
  Packet Statistics:
    Rx Packets: 0          Tx Packets: 0
    Rx Bytes: 0           Tx Bytes: 0
Interface:ifp-0/0/4
  Admin/Link/Operational Status: Up/Up/Up
  Speed configured: 10G
  Speed maximum: 10G
  Duplex: Full
  Autonegotiation: Disabled
  Encapsulation mode: ieee
  MTU: 16360
  Maximum Frame Size: 16360
  Interface Type: ethernet
  Interface index: 8193
  MAC: 80:a2:35:ee:a8:04
  Uptime: Fri Nov 13 15:04:20 GMT +0000 2020
  Description: Physical interface #4 from node 0, chip 0
  Packet Statistics:
    Rx Packets: 5744      Tx Packets: 5748
    Rx Bytes: 574400     Tx Bytes: 574800
Interface:ifp-0/0/5
  Admin/Link/Operational Status: Up/Down/Down
  Speed configured: 10G
  Speed maximum: 10G
  Duplex: Full
  Autonegotiation: Disabled
  Encapsulation mode: ieee
  MTU: 16360
  Maximum Frame Size: 16360
  Interface Type: ethernet
  Interface index: 10241
  MAC: 80:a2:35:ee:a8:05
  Uptime: Wed Nov 11 14:55:53 GMT +0000 2020
  Description: Physical interface #5 from node 0, chip 0
  Packet Statistics:
    Rx Packets: 0          Tx Packets: 0
    Rx Bytes: 0           Tx Bytes: 0
Interface:ifp-0/0/6
  Admin/Link/Operational Status: Up/Down/Down
  Speed configured: 10G
  Speed maximum: 10G
  Duplex: Full
```

```

Autonegotiation: Disabled
Encapsulation mode: ieee
MTU: 16360
Maximum Frame Size: 16360
Interface Type: ethernet
Interface index: 12289
MAC: 80:a2:35:ee:a8:06
Uptime: Wed Nov 11 14:55:53 GMT +0000 2020
Description: Physical interface #6 from node 0, chip 0
Packet Statistics:
  Rx Packets: 0          Tx Packets: 0
  Rx Bytes: 0           Tx Bytes: 0
    
```

5.13. show interface statistics

This command displays summarized statistics output for all ports.

```

supervisor@rtbrick: op> show interface statistics
Interface:  ifp-0/0/1
  Counter          Direction  Unit      Rx      Rx Diff  Rx Rate
Tx      Tx Diff  Tx Rate
  IPv4          -          Packets  -        -         -
-          -          Bytes    -        -         -
-          -          IPv6     -        -         -
-          -          Bytes    -        -         -
-          -          MPLS     -        -         -
-          -          Bytes    -        -         -
-          -          Punt     -        -         -
-          -          Bytes    -        -         -
-          -          Miss     RX       -        -         -
-          -          Bytes    -        -         -
-          -          Drops    -        -         -
-          -          Bytes    -        -         -
-          -          Error    RX       -        -         -
-          -          Bytes    -        -         -
-          -          Error    TX       -        -         -
-          -          Bytes    -        -         -
-          -          No Buff  RX       -        -         -
-          -          
```

| | | | | | | |
|-----------------------|----------------------|---------|-----------|---------|------|---------|
| - | - | - | Bytes | - | - | - |
| - | Traffic Statistics | - | Packets | - | - | - |
| - | - | - | Bytes | - | - | - |
| - | Unicast Statistics | - | Packets | - | - | - |
| - | - | - | Bytes | - | - | - |
| - | Broadcast Statistics | - | Packets | - | - | - |
| - | - | - | Bytes | - | - | - |
| - | Multicast Statistics | - | Packets | - | - | - |
| - | - | - | Bytes | - | - | - |
| - | Traffic Statistics | - | Packets | - | - | - |
| - | - | - | Bytes | - | - | - |
| - | Unicast Statistics | - | Packets | - | - | - |
| - | - | - | Bytes | - | - | - |
| - | Broadcast Statistics | - | Packets | - | - | - |
| - | - | - | Bytes | - | - | - |
| - | Multicast Statistics | - | Packets | - | - | - |
| - | - | - | Bytes | - | - | - |
| Interface: ifp-0/0/10 | | | | | | |
| | Counter | | Direction | Unit | Rx | Rx Diff |
| Tx | Tx Diff | Tx Rate | | | | Rx Rate |
| - | IPv4 | - | | Packets | - | - |
| - | - | - | | Bytes | - | - |
| - | IPv6 | - | | Packets | - | - |
| - | - | - | | Bytes | - | - |
| - | MPLS | - | | Packets | - | - |
| - | - | - | | Bytes | - | - |
| - | Punt | - | | Packets | - | - |
| - | - | - | | Bytes | - | - |
| - | Miss | RX | | Packets | - | - |
| - | - | - | | Bytes | - | - |
| - | Drops | - | | Packets | 5001 | - |

| | | | | | | | |
|------------------------------------|----------------------|---------|-----------|--------------------------------|--------|---------|---------|
| - | - | - | - | Bytes | - | - | - |
| - | Error | - | RX | Packets | - | - | - |
| - | - | - | - | Bytes | - | - | - |
| - | Error | - | TX | Packets | 47 | - | - |
| - | - | - | - | Bytes | - | - | - |
| - | No Buff | - | RX | Packets | - | - | - |
| - | - | - | - | Bytes | - | - | - |
| - | Traffic Statistics | - | - | Packets | 5001 | - | - |
| 68565 | - | - | - | Bytes | 490098 | - | - |
| 5876134 | - | - | - | Packets | - | - | - |
| - | Unicast Statistics | - | - | Bytes | - | - | - |
| - | - | - | - | Packets | - | - | - |
| - | Broadcast Statistics | - | - | Bytes | - | - | - |
| - | - | - | - | Packets | - | - | - |
| - | Multicast Statistics | - | - | Bytes | - | - | - |
| - | - | - | - | Packets | - | - | - |
| - | Traffic Statistics | - | - | Packets | 5022 | - | - |
| 68565 | 2 | - | - | Bytes | 512244 | - | - |
| 6243130 | 188 | 37 | - | Packets | - | - | - |
| - | Unicast Statistics | - | - | Bytes | - | - | - |
| - | - | - | - | Packets | - | - | - |
| - | Broadcast Statistics | - | - | Bytes | - | - | - |
| 5796 | - | - | - | Packets | - | - | - |
| - | Multicast Statistics | - | - | Bytes | - | - | - |
| 62769 | 2 | - | - | Packets | 5022 | - | - |
| - | - | - | - | Bytes | - | - | - |
| Logical Interface: ifl-0/0/10/100, | | | | Physical Interface: ifp-0/0/10 | | | |
| Tx | Tx Diff | Tx Rate | Direction | Unit | Rx | Rx Diff | Rx Rate |
| - | - | - | - | Packets | - | - | - |
| - | - | - | - | Bytes | - | - | - |
| - | - | - | - | Packets | - | - | - |
| - | - | - | - | Bytes | - | - | - |

| | | | | | | |
|---------------------------------|---|----|---------|--------|---|---|
| MPLS | - | - | Packets | - | - | - |
| - | - | - | Bytes | - | - | - |
| Punt | - | - | Packets | - | - | - |
| - | - | - | Bytes | - | - | - |
| Miss | - | RX | Packets | - | - | - |
| - | - | - | Bytes | - | - | - |
| Drops | - | - | Packets | 5001 | - | - |
| - | - | - | Bytes | - | - | - |
| Error | - | RX | Packets | - | - | - |
| - | - | - | Bytes | - | - | - |
| Error | - | TX | Packets | 47 | - | - |
| - | - | - | Bytes | - | - | - |
| No Buff | - | RX | Packets | - | - | - |
| - | - | - | Bytes | - | - | - |
| Traffic Statistics | - | - | Packets | 5001 | - | - |
| 68565 | - | - | Bytes | 490098 | - | - |
| 5876134 | - | - | Packets | - | - | - |
| Unicast Statistics | - | - | Bytes | - | - | - |
| - | - | - | Packets | - | - | - |
| Broadcast Statistics | - | - | Bytes | - | - | - |
| - | - | - | Packets | - | - | - |
| Multicast Statistics | - | - | Bytes | - | - | - |
| - | - | - | Packets | - | - | - |
| - | - | - | Bytes | - | - | - |
| Packet Statistics: | | | | | | |
| Ingress Forwarded Packets: 1816 | | | | | | |
| Ingress Forwarded Bytes: 185232 | | | | | | |
| Ingress Drop Packets: 1 | | | | | | |
| Ingress Drop Bytes: 102 | | | | | | |
| Egress Forwarded Packets: 0 | | | | | | |
| Egress Forwarded Bytes: 0 | | | | | | |
| Egress Drop Packets: 0 | | | | | | |
| Egress Drop Bytes: 0 | | | | | | |

6. Statistics Show Commands

6.1. Viewing ACL Statistics

6.1.1. show bcm acl statistics

This command displays all ACL statistics.

```
supervisor@rtbrick: op> show bcm acl statistics

Rule Name: mfc1
  ACL Type: multifield_ipv4
  Ordinal: 0
  ACL_Stat_id: 4294967295
  Counter_id: 16376
  Counter_engine: 254
  Acl_handle: 0
  Packet_statistics: 1524933
  Bytes_statistics: 1530770278
  Packet_statistics_core1: 0
  Bytes_statistics_core1: 0
  bcmFieldStatBytes: 0
  bcmFieldStatPackets: 0
  bcmFieldStatGreenBytes: 1530770278
  bcmFieldStatGreenPackets: 1524933
  bcmFieldStatNotGreenBytes: 0
  bcmFieldStatNotGreenPackets: 0
  bcmFieldStatAcceptedBytes: 1530770278
  bcmFieldStatAcceptedPackets: 1524933
  bcmFieldStatAcceptedGreenBytes: 1530770278
  bcmFieldStatAcceptedGreenPackets: 1524933
  bcmFieldStatAcceptedNotGreenBytes: 0
  bcmFieldStatAcceptedNotGreenPackets: 0
  bcmFieldStatDroppedBytes: 0
  bcmFieldStatDroppedPackets: 0
  bcmFieldStatDroppedGreenBytes: 0
  bcmFieldStatDroppedGreenPackets: 0
  bcmFieldStatDroppedYellowBytes: 0
  bcmFieldStatDroppedYellowPackets: 0
  bcmFieldStatDroppedRedBytes: 0
  bcmFieldStatDroppedRedPackets: 0
  bcmFieldStatDroppedNotGreenBytes: 0
  bcmFieldStatDroppedNotGreenPackets: 0
  bcmFieldStatDroppedNotYellowBytes: 0
  bcmFieldStatDroppedNotYellowPackets: 0
  bcmFieldStatDroppedNotRedBytes: 0
  bcmFieldStatDroppedNotRedPackets: 0
  bcmFieldStatDiscardedYellowOctets: 0
  bcmFieldStatDiscardedYellowPackets: 0
  bcmFieldStatDiscardedRedOctets: 0
  bcmFieldStatDiscardedRedPackets: 0
```

6.1.2. show bcm acl statistics type <type>

This command displays ACL statistics for the specified type.

```
supervisor@rtbrick: op> show bcm acl statistics type l3v4
Rule Name: radius-srv1-v4-coa-trap
  ACL Type: l3v4
  Ordinal: 0
  ACL_Stat_id: 4294967295
  Counter_id: 0
  Counter_engine: 254
  Acl_handle: 0
  Packet_statistics: 58664
  Bytes_statistics: 4145806
  Packet_statistics_core1: 0
  Bytes_statistics_core1: 0
  bcmFieldStatBytes: 0
  bcmFieldStatPackets: 0
  bcmFieldStatGreenBytes: 4145806
  bcmFieldStatGreenPackets: 58664
  bcmFieldStatNotGreenBytes: 0
  bcmFieldStatNotGreenPackets: 0
  bcmFieldStatAcceptedBytes: 4145806
  bcmFieldStatAcceptedPackets: 58664
  bcmFieldStatAcceptedGreenBytes: 4145806
  bcmFieldStatAcceptedGreenPackets: 58664
  bcmFieldStatAcceptedNotGreenBytes: 0
  bcmFieldStatAcceptedNotGreenPackets: 0
  bcmFieldStatDroppedBytes: 0
  bcmFieldStatDroppedPackets: 0
  bcmFieldStatDroppedGreenBytes: 0
  bcmFieldStatDroppedGreenPackets: 0
  bcmFieldStatDroppedYellowBytes: 0
  bcmFieldStatDroppedYellowPackets: 0
  bcmFieldStatDroppedRedBytes: 0
  bcmFieldStatDroppedRedPackets: 0
  bcmFieldStatDroppedNotGreenBytes: 0
  bcmFieldStatDroppedNotGreenPackets: 0
  bcmFieldStatDroppedNotYellowBytes: 0
  bcmFieldStatDroppedNotYellowPackets: 0
  bcmFieldStatDroppedNotRedBytes: 0
  bcmFieldStatDroppedNotRedPackets: 0
  bcmFieldStatDiscardedYellowOctets: 0
  bcmFieldStatDiscardedYellowPackets: 0
  bcmFieldStatDiscardedRedOctets: 0
  bcmFieldStatDiscardedRedPackets: 0
```

6.1.3. show bcm acl statistics type l3v4 rule <rule-name>

This command displays ACL statistics for the specified type and rule-name.

```
supervisor@rtbrick: op> show bcm acl statistics type l3v4 rule radius-srv1-  
v4-auth-trap
```

```
Rule Name: radius-srv1-v4-auth-trap  
  ACL Type: l3v4  
  Ordinal: 0  
  ACL_Stat_id: 4294967295  
  Counter_id: 0  
  Counter_engine: 254  
  Acl_handle: 0  
  Packet_statistics: 58768  
  Bytes_statistics: 4153086  
  Packet_statistics_core1: 0  
  Bytes_statistics_core1: 0  
  bcmFieldStatBytes: 0  
  bcmFieldStatPackets: 0  
  bcmFieldStatGreenBytes: 4153086  
  bcmFieldStatGreenPackets: 58768  
  bcmFieldStatNotGreenBytes: 0  
  bcmFieldStatNotGreenPackets: 0  
  bcmFieldStatAcceptedBytes: 4153086  
  bcmFieldStatAcceptedPackets: 58768  
  bcmFieldStatAcceptedGreenBytes: 4153086  
  bcmFieldStatAcceptedGreenPackets: 58768  
  bcmFieldStatAcceptedNotGreenBytes: 0  
  bcmFieldStatAcceptedNotGreenPackets: 0  
  bcmFieldStatDroppedBytes: 0  
  bcmFieldStatDroppedPackets: 0  
  bcmFieldStatDroppedGreenBytes: 0  
  bcmFieldStatDroppedGreenPackets: 0  
  bcmFieldStatDroppedYellowBytes: 0  
  bcmFieldStatDroppedYellowPackets: 0  
  bcmFieldStatDroppedRedBytes: 0  
  bcmFieldStatDroppedRedPackets: 0  
  bcmFieldStatDroppedNotGreenBytes: 0  
  bcmFieldStatDroppedNotGreenPackets: 0  
  bcmFieldStatDroppedNotYellowBytes: 0  
  bcmFieldStatDroppedNotYellowPackets: 0  
  bcmFieldStatDroppedNotRedBytes: 0  
  bcmFieldStatDroppedNotRedPackets: 0  
  bcmFieldStatDiscardedYellowOctets: 0  
  bcmFieldStatDiscardedYellowPackets: 0  
  bcmFieldStatDiscardedRedOctets: 0  
  bcmFieldStatDiscardedRedPackets: 0
```

6.2. Viewing PPPOE statistics

6.2.1. show bcm pppoe counters

This command displays all PPOE counters.

```
supervisor@rtbrick: op> show bcm pppoe counters
Subscriber-Id: 72339069014638594
  PPP SessionId: 1
  IFP Name: n/a
  Local MAC: b8:6a:97:a5:98:03
  Subscriber MAC: 00:15:01:00:00:01
  Rx_Accepted_pkts: 11
  Rx_Accepted_bytes: 789
  Rx_Dropped_pkts: 0
  Rx_Dropped_bytes: 0
  Tx_Accepted_pkts: 11
  Tx_Accepted_bytes: 529
  Tx_Dropped_pkts: 0
  Tx_Dropped_bytes: 0
Subscriber-Id: 72339069014638596
  PPP SessionId: 3
  IFP Name: n/a
  Local MAC: b8:6a:97:a5:98:03
  Subscriber MAC: 00:13:01:00:00:01
  Rx_Accepted_pkts: 206868553
  Rx_Accepted_bytes: 206855911805
  Rx_Dropped_pkts: 2
  Rx_Dropped_bytes: 2000
  Tx_Accepted_pkts: 0
  Tx_Accepted_bytes: 0
  Tx_Dropped_pkts: 0
  Tx_Dropped_bytes: 0
```

6.2.2. show bcm pppoe counters <subscriber-ID>

This command displays PPPOE counters for the specified subscriber-ID.

```
supervisor@rtbrick: op> show bcm pppoe counters 72339069014638594
Subscriber-Id: 72339069014638594
  PPP SessionId: 1
  IFP Name: n/a
  Local MAC: b8:6a:97:a5:98:03
  Subscriber MAC: 00:15:01:00:00:01
  Rx_Accepted_pkts: 11
  Rx_Accepted_bytes: 789
  Rx_Dropped_pkts: 0
  Rx_Dropped_bytes: 0
  Tx_Accepted_pkts: 11
  Tx_Accepted_bytes: 529
  Tx_Dropped_pkts: 0
  Tx_Dropped_bytes: 0
```

7. Clear Commands

7.1. Interface Counters

7.1.1. clear interface statistics

This command clears VPP interface statistics (physical/Logical)

```
supervisor@rtbrick: op> clear interface statistics
```

7.1.2. clear interface statistics <interface-name>

This command clears VPP interface statistics (physical/Logical) for the specified interface name.

```
supervisor@rtbrick: op> clear interface statistics ifp-0/0/54
```

7.2. Clearing ACL Counters

7.2.1. clear acl counters

This command clears all ACL counters.

```
supervisor@rtbrick: op> clear acl counters
```

7.2.2. clear acl counters type <type>

This command clears the ACL counters for the specified type.

```
supervisor@rtbrick: op> clear acl counters type l3v6
```

7.2.3. clear acl counters type <type> rule <rule-name>

```
supervisor@rtbrick: op> clear acl counters type l2 rule rule1
```

7.3. BCM clear Counter

7.3.1. Interface Counters

7.3.1.1. clear bcm interface statistics

This command clears all bcm interface statistics

```
supervisor@rtbrick: op> clear bcm interface statistics
```

7.3.1.2. clear bcm interface statistics <interface-name>

This command clears interface statistics for the specified interface.

```
supervisor@rtbrick: op> clear bcm interface statistics ifp-0/0/10
```